



**MOTOROLA**

User's Guide

***TIMEPORT™***  
**DIGITAL WIRELESS TELEPHONE**



(inside front cover)

# Welcome

---

Welcome to the world of Motorola digital wireless communications! Motorola is a global leader in communications technology. We are pleased that you have chosen the Motorola **TIMEPORT** 270c wireless phone to keep you connected with ease.

All Motorola phones are designed and manufactured to meet

Motorola's rigorous specifications and world-class quality standards. During development, our testing team took the Motorola **TIMEPORT** phone through rigorous durability tests including temperature, humidity, shock, dust, vibration, and drop tests.

We are confident that you and your callers will find your wireless phone to be a convenient and reliable way to stay in touch. Thank you for choosing Motorola **TIMEPORT**, and enjoy your new phone!



Personal Communications Sector  
600 North U.S. Highway 45  
Libertyville, Illinois 60048

1-800-331-6456 (United States)  
1-888-390-6456 (TTY/TDD United States)  
1-800-461-4575 (Canada)

[www.motorola.com](http://www.motorola.com)

MOTOROLA, the Stylized M Logo and all other trademarks indicated as such herein are trademarks of Motorola, Inc. ® Reg. U.S. Pat. & Tm. Off. TrueSync is a trademark of Starfish, Inc., a wholly owned independent subsidiary of Motorola, Inc. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. All other product or service names are the property of their respective owners.

© 2001 Motorola, Inc. All rights reserved. Printed in the U.S.A.

Manual number: 6809436A13-O

Cover number: 8988485L01












# Menu Map

## Main Menu

- **Recent Calls**
  - Received Calls
  - Dialed Calls
  - Notepad
  - Call Times
- **Phonebook**
- **Datebook**
- **Quick Dial**
- **Radio**
- **Messages**
  - Voicemail
  - Text Msgs
  - Browser Alerts
  - Quick Notes
  - Outbox
  - Drafts
- **Shortcuts**
- **Voice Notes**
- **Browser**
- **Settings**  
(see reverse)

**Note:** This is the standard menu layout. You or your service provider may have modified the menu structure or changed some feature names. Not all features may be available for all users. For example, the **Radio** feature is displayed only when the FM radio headset accessory is plugged into the accessory connector port on your phone.

Shortcuts
<b>Change display zoom:</b> Press  , then press and hold 
<b>Lock/unlock keypad:</b> Press  
<b>Display my phone number:</b> Press  
<b>Go to dialed calls list:</b> Press 

# Settings Menu

- **Ring/Vibrate**

- Alert
- *Alert* Detail

- **Phone Status**

- My Tel. Number
- Battery Meter
- Other Information

- **Connection**

- Incoming Call

- **In-Call Setup**

- In-Call Timer
- Answer Options

- **Security**

- Phone Lock
- Lock Keypad
- Lock Application
- Restrict Calls
- New Passwords

- **Other Settings**

- Personalize

- Main Menu
- Keys
- Greeting
- Banner
- Quick Dial

- Initial Setup

- Time and Date
- Auto PIN Dial
- Auto Redial
- Backlight
- Zoom
- Scroll
- Language
- Contrast Setting
- DTMF
- Master Reset
- Master Clear

- Network

- Car Settings
- Headset

# Phone Diagram



# Contents

---

<b>Menu Map</b>	3
<b>Phone Diagram</b>	5
<b>About This Guide</b>	11
<b>Safety and General Information</b>	13
<b>Getting Started</b>	21
What's in the Box?	21
Installing the Battery	22
Charging the Battery	24
Turning Your Phone On	25
Sending a Call	26
Ending a Call	26
Receiving a Call	27
Displaying Your Phone Number	27
<b>About Your Phone</b>	28
Display	28
Changing the Zoom Setting	31
Volume Keys	31
4-Way Navigation Key	32
Speakerphone	33
Battery Use	33
<b>Sending and Receiving Calls</b>	35
Redialing a Number	35
Using Automatic Redial	35
Caller ID	36
Returning an Unanswered Call	36
Dialing an Emergency Number When the Phone is Locked	37
Entering Numbers in the Notepad	38

# Contents

Muting the Ring or Vibrate Alert .....	38
Terminating an Incoming Call .....	39
Dialing With Speed Dial .....	39
Dialing With One-Touch Dial .....	40
Dialing a Number In a Text Message .....	41
Additional Dialing Features .....	42
<b>Using Features While On a Call.</b> .....	44
Using Call Waiting .....	44
Making a Three-Way Call .....	45
Additional On-Call Features .....	46
<b>Using the Menu</b> .....	47
Navigating to a Feature .....	47
Selecting a Feature Option .....	48
Entering Feature Information .....	49
Entering Text .....	52
<b>Menu Feature Descriptions.</b> .....	59
<b>Recent Calls</b> .....	69
Viewing the Received Calls or Dialed Calls List .....	69
Using the Notepad .....	72
Call Times .....	73
Viewing and Resetting Call Times .....	74
<b>Phonebook</b> .....	75
Fields in a Phonebook Entry Form .....	75
Storing a Phonebook Entry .....	76
Recording a Voice Name For a Phonebook Entry .....	78
Dialing a Phonebook Entry .....	80
Editing a Phonebook Entry .....	81
Deleting a Phonebook Entry .....	81
Checking Phonebook Capacity .....	82

Synchronizing with TrueSync Software .....	82
Setting Up the Phonebook .....	83
<b>Datebook</b> .....	84
Week View .....	84
Day View .....	85
Event View .....	86
Storing a New Event .....	87
Changing Event Information .....	88
Copying an Event .....	89
Deleting an Event .....	90
<b>Radio</b> .....	91
Turning the Radio On and Off .....	91
Tuning a Station .....	91
Storing a Preset .....	92
Selecting a Preset .....	92
Sending and Receiving Calls With the Radio On .....	92
<b>Messages—Voicemail</b> .....	93
Storing Your Voicemail Number .....	93
Receiving a New Voicemail Message .....	93
Listening to a Voicemail Message .....	94
<b>Messages—Text</b> .....	95
Setting Up the Text Message Inbox .....	95
Receiving a New Text Message .....	96
Reading, Locking, or Deleting a Text Message .....	97
Sending a New Text Message .....	99
Viewing the Status of Sent Text Messages .....	100
<b>Shortcuts</b> .....	101
Standard Shortcuts .....	101
User-Settable Shortcuts .....	101

Creating a Shortcut .....	102
Using Shortcuts .....	104
<b>Voice Notes</b> .....	106
Recording a Voice Note .....	106
Viewing the Voice Notes List .....	108
Playing a Voice Note .....	108
Locking and Unlocking a Voice Note .....	111
Deleting a Voice Note .....	112
<b>Micro-Browser</b> .....	113
Starting a Micro-Browser Session .....	113
Interacting With Web Pages .....	114
<b>Adjusting Your Settings</b> .....	115
Ring/Vibrate .....	115
Reminders .....	117
Reordering Menu Items .....	117
Customizing a Soft Key Function .....	118
Hands-Free Use .....	119
<b>Data and Fax Calls</b> .....	123
Connecting Your Phone to an External Device .....	123
Sending a Data or Fax Call .....	126
Receiving a Data or Fax Call .....	127
<b>Security</b> .....	130
Assigning a New Code or Password .....	130
If You Forget a Code or Password .....	131
Locking and Unlocking Your Phone .....	132
Locking and Unlocking Your Keypad .....	134
Restricting Calls .....	134

# ***Contents***

<b>Troubleshooting</b> . . . . .	136
<b>Programming Instructions</b> . . . . .	144
<b>Specific Absorption Rate Data</b> . . . . .	146
<b>FDA Update</b> . . . . .	148
<b>Warranty</b> . . . . .	157
<b>Patent Information</b> . . . . .	165
<b>Export Law Assurances</b> . . . . .	171
<b>Index</b> . . . . .	172



# About This Guide

---

## Using Your Phone's Features

This user guide introduces you to the many features in your Motorola **TIMEPORT** phone. A reference guide for your phone is also available that explains the phone's features in more detail. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals>


or contact the Motorola Customer Call Center at 1-800-331-6456.

## Navigating To a Menu Feature

You can access many of your phone's features through the menu system. This guide shows you how to navigate to a specific menu feature as follows:

### Find the Feature

 > Recent Calls  
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to view the dialed calls list.

## Optional Features



Features marked with this label are optional network and/or subscription-dependent features. These features may not be offered by all service providers in all geographical areas. Contact your service provider for information about availability.

## Optional Accessories



Features marked with this label require the use of an optional Motorola Original™ accessory.



# ***Safety and General Information***

---

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.

## ***RF Operational Characteristics***

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits radio frequency (RF) energy. The phone operates in the frequency range of 824 MHz to 849 MHz in analog and digital mode and 1851.25 MHz to 1908.75 MHz in digital mode.

When you communicate with your phone, the system handling your call controls the power levels at which your phone transmits. The output power level typically may vary over a range from 0.05 watts to 0.54 watts in analog mode and 0.0 watts to 0.25 watts in digital mode.

## ***Exposure To Radio Frequency Energy***

Your Motorola phone is designed to comply with the following national and international standards and guidelines regarding exposure of human beings to radio frequency electromagnetic energy (EME):

- United States Federal Communications Commission, Code of Regulations; 47 CFR part 2 sub-part J

# ***Safety and General Information***

- American National Standards Institute (ANSI) / Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992
- Institute of Electrical and Electronic Engineers (IEEE) C95.1-1999 Edition
- National Council on Radiation Protection and Measurements (NCRP) of the United States, Report 86, 1986
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998
- National Radiological Protection Board of the United Kingdom 1995
- Ministry of Health (Canada) Safety Code 6. Limits of Human Exposure to Radiofrequency Electromagnetic Fields in the Frequency Range from 3 kHz to 300 GHz, 1999
- Australian Communications Authority Radiocommunications (Electromagnetic Radiation-Human Exposure) Standard 1999

To assure optimal phone performance and make sure human exposure to radio frequency electromagnetic energy is within the guidelines set forth in the above standards, always adhere to the following procedures:



## ***Portable Phone Operation and EME Exposure***

### ***Antenna Care***

**Use only the supplied or an approved replacement antenna.** Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

**Do NOT hold the antenna when the phone is in use.** Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

### ***Phone Operation***

When placing or receiving a phone call, hold your phone as you would a wireline telephone. **Speak directly into the microphone.**

### ***Body-Worn Operation***

To maintain compliance with FCC RF exposure guidelines, if you wear a phone on your body when transmitting, always place the phone in a **Motorola-supplied or approved clip, holder, holster, case, or body harness.** Use of non-Motorola-approved accessories may exceed FCC RF exposure guidelines. **If you do not use a body-worn accessory, and are not holding the phone in the normal use position at the ear, ensure the antenna is at least one inch (2.5 centimeters) from your body when transmitting.**

## ***Data Operation***

When using any data feature of the phone, with or without an accessory cable, **position the phone antenna at least one inch (2.5 centimeters) from your body.**

## ***Approved Accessories***

For a list of approved Motorola accessories, visit our website at [www.motorola.com](http://www.motorola.com).

## ***Electromagnetic Interference/Compatibility***

**Note:** Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility.

## ***Facilities***

To avoid electromagnetic interference and/or compatibility conflicts, turn off your phone in any facility where posted notices instruct you to do so. Hospitals or health care facilities may be using equipment that is sensitive to external RF energy.

## ***Aircraft***

When instructed to do so, turn off your phone when on board an aircraft. Any use of a phone must be in accordance with applicable regulations per airline crew instructions.



## **Medical Devices**

### **Pacemakers**

The Health Industry Manufacturers Association recommends that a minimum separation of 6 inches (15 centimeters) be maintained between a handheld wireless phone and a pacemaker. These recommendations are consistent with the independent research by, and recommendations of, Wireless Technology Research.

Persons with pacemakers should:

- ALWAYS keep the phone more than six inches (15 centimeters) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- use the ear opposite the pacemaker to minimize the potential for interference.
- turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

### **Hearing Aids**

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

## **Other Medical Devices**

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

## ***Safety and General***

### ***Use While Driving***

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- give full attention to driving and to the road.
- use hands-free operation, if available.
- pull off the road and park before making or answering a call if driving conditions so require.

## ***Operational Warnings***

### ***For Vehicles With an Air Bag***

Do not place a portable phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a portable phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.





## ***Potentially Explosive Atmospheres***

Turn off your phone prior to entering any area with a potentially explosive atmosphere, unless the phone is a model specifically identified as being "Intrinsically Safe" for use in such areas (for example, Factory Mutual, CSA, or UL Approved). Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

**Note:** The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust, or metal powders, and any other area where you would normally be advised to turn off your vehicle engine. Areas with potentially explosive atmospheres are often but not always posted.

## ***Blasting Caps and Areas***

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted: "Turn off two-way radio." Obey all signs and instructions.

## ***Operational Cautions***

### ***Antennas***

**Do not use any portable phone that has a damaged antenna.** If a damaged antenna comes into contact with your skin, a minor burn can result.

### ***Batteries***

All batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touches exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become quite hot. Exercise care in handling any charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects.

GEN011001

# Getting Started

---



## What's in the Box?

Your digital wireless phone typically comes equipped with a battery and a charger. Other accessory options can customize your phone for maximum performance and portability. The following illustrations show a sample of the package contents.

**Note:** Your phone and accessories may not look exactly as pictured.



Motorola  
Telephone




Battery



Holster

# Getting Started

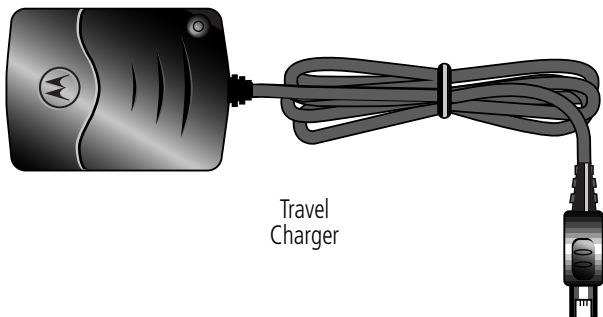

Travel  
Charger

To purchase Motorola Original™ accessories, please phone 1-800-331-6456 in the United States or 1-800-461-4575 in Canada.

## ***Installing the Battery***

Before you can use your phone, you need to install and charge the battery.




Your phone is designed to be used only with Motorola Original batteries and accessories. We recommend that you store batteries in their protective cases when not in use.



## Do This

- 1 Remove the battery from its protective clear plastic case.
- 2 If the phone's battery door is already in place, push down the battery door release latch, then slide the door down and lift off.

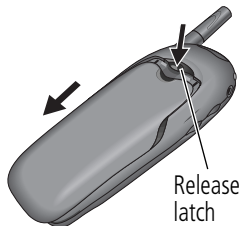

- 3 Insert the battery, printed arrows first, into the battery compartment and push down.



- 4 Replace the battery door, then slide the door up until it clicks into place.



## Charging the Battery

Before you can use your phone, you need to install and charge the battery.

### Do This

- 1 Plug the travel charger into your phone with the release tab facing up.



- 2 Plug the other end of the travel charger into the appropriate electrical outlet.
- 3 When your phone indicates that the battery is fully charged (**Charge Complete**), press the release tab and remove the travel charger.

**Tip:** When your phone is turned on, the battery level indicator in the upper right corner of the phone display shows the amount of charge left in your battery. (See the "Battery Level Indicator" item on page 30.)



## Turning Your Phone On

**Do This**

**To**

- 1 Press and hold the power key turn on your phone




- 2 Enter your four-digit unlock code and press **OK** (✓)

unlock your phone, if necessary


The unlock code is originally set to 1234. (For more information, see "Locking and Unlocking Your Phone" on page 132.)

## Sending a Call

To call a number, your phone must be turned on, be unlocked, and have a network connection with adequate signal strength.

Do This	To
1 Extend the antenna	optimize signal reception
2 Press the keypad keys	dial the phone number (up to 32 digits)  <b>Tip:</b> If you make a mistake, press <b>DELETE</b> (🗑️) to delete the last digit, or press and hold <b>DELETE</b> (🗑️) to clear all digits.
3 Press  (send key)	send the call

## Ending a Call

Press	To
 (end key)	end the call





## Receiving a Call

To receive a call, your phone must be turned on and have a network connection with adequate signal strength. If your phone is locked, you must unlock the phone to answer the call.

When you receive a call, your phone rings and/or vibrates and displays an incoming call message.

**Press**



or **ANSWER** (📞)

**To**

answer the call

## Displaying Your Phone Number

From the idle display:

**Press**



**To**

see your phone number


# About Your Phone

---


See page 5 for a diagram of your phone that describes basic phone components.

## Display

The top section of the display shows phone status indicators. The following illustration shows some of the common indicators that you may see at the top of the display when using your phone.

Messages, phone numbers, and menu options appear in the middle of the display. Text labels at the bottom corners of the display show the current soft key functions. A  (menu) indicator in the bottom center of the display indicates that you can open the main menu or a feature sub-menu to see more options. For more information about the soft key and menu key labels, see “Using the Menu” on page 47.

Some of the phone functions described in this guide must be performed from the idle display. The term *idle display* refers to the standard display that you see when your phone is on and ready to use, when you are *not* on a call or using the menu system.

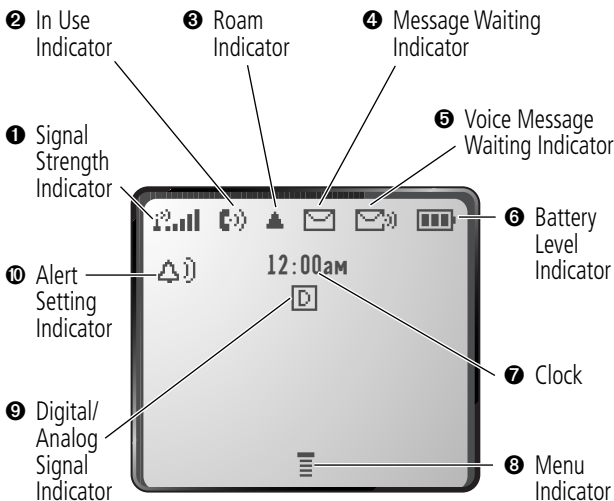

**1 Signal Strength Indicator** Shows the strength of your phone's connection with the network.

Strong      No signal

You cannot send or receive calls when the "no signal" indicator is displayed.

**2 In Use Indicator** Appears when a call is in progress.

**3 Roam Indicator** Appears when your phone uses another network system outside your home network. When you leave your home network area, your phone *roams* or seeks another network.

# About Your Phone



**④ Message Waiting Indicator** Appears when your phone receives a text message.



**⑤ Voice Message Waiting Indicator** Appears when you receive a voicemail message.


**⑥ Battery Level Indicator** Shows the amount of charge left in your battery. The more segments visible, the greater the charge.


High     Empty

Recharge your battery as soon as possible when you see the **Low Battery** warning message.





**⑦ Clock** Shows the current time.

**⑧ Menu Indicator** Indicates that you can press  to open a menu. See "Using the Menu" on page 47.


**⑨ Digital () or Analog () Signal Indicator** Shows whether you are receiving a digital or analog signal.

**⑩ Alert Setting Indicator** Shows the current selected alert. The default alert setting is a ringer.

 Loud ring

 Soft ring

 Vibrate

 Ring and vibrate

 Silent



## Changing the Zoom Setting

You can set your phone's display to show either six lines or four lines of text plus soft key labels. Six lines of text display more information, while four lines increase text size.

To change the display view, press **MENU** once, then press and hold **MENU** again within two seconds of the first press.

You can also adjust the zoom setting from the menu. See the "Zoom" item on page 63.

## Volume Keys

Use the upper and lower volume keys to adjust your phone's earpiece, speakerphone, and ringer volume.



When	Press	To
During a call	volume keys	increase or decrease earpiece or speakerphone speaker volume
From the idle display	volume keys	increase or decrease ringer volume

You can also use the volume keys to scroll up or down through menus and lists.

To change keypad volume, see “Select a Ring/Vibration for a Specific Event” on page 116.

## 4-Way Navigation Key

The 4-way navigation key is a joystick that lets you move through the menu. It allows you to adjust feature settings by pressing the key in the desired direction.


4-way  
navigation  
key



**Tip:** Down and up are your primary movements within menus. Right and left are available for shortcuts (advancing through choices), datebook, adjusting settings (such as contrast or key volume), and when entering or editing text.



## Speakerphone

Your phone includes an integrated speakerphone for hands-free phone operation. Press  (speakerphone key) to activate and deactivate the speakerphone. When the speakerphone is activated, you can talk to the other party without holding the phone to your ear.

Speakerphone  
key



Speakerphone

**Note:** The integrated speakerphone is disabled when you connect your phone to a hands-free car kit or a headset accessory.

## Battery Use

**Caution:** To prevent injuries or burns, do not allow metal objects to contact or short-circuit the battery terminals.

To maximize your battery's performance:

- Always use Motorola approved batteries and battery chargers. The phone warranty does not cover damage caused from using non-Motorola batteries and/or battery chargers.
- New batteries or batteries that have been stored for long periods of time may require a longer charge time.
- Maintain the battery at or near room temperature when charging.

## About Your Phone

- Do not expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- When you do not intend to use a battery for a while, store it uncharged in a cool, dark, dry place, such as a refrigerator.
- Over extended periods of time, batteries gradually wear down and require longer charging times. This is normal. If you charge your battery regularly and notice a decrease in talk time or an increase in charging time, then it is probably time to purchase a new battery.
- The more you talk on the phone or use phone features (like sending text messages), the less standby time your battery has.



The rechargeable batteries that power this product must be disposed of properly and may need to be recycled. Refer to your battery's label for battery type.

Contact your local recycling center for proper disposal methods. Never dispose of batteries in a fire because they may explode.



# ***Sending and Receiving Calls***



---



For basic instructions on how to send a call, end a call, and receive a call, see page 26 of the “Getting Started” section.

## ***Redialing a Number***



If you hear an ordinary busy signal, the phone number you dialed is busy.

Press	To
1 	hang up
2 	redial the busy number

## ***Using Automatic Redial***

If the network is busy, you hear a fast busy signal, and your phone displays the message **Call Failed**.

With automatic redial, your phone repeats the call attempt over the next four minutes.

Press	To
 or <b>RETRY</b> (  )	activate automatic redial

# ***Sending and Receiving Calls***

When the call goes through, your phone rings or vibrates once, displays **Redial Successful**, and then connects the call automatically.

You must activate automatic redial in order to use the feature. See the “Auto Redial” item on page 62.

## ***Caller ID***




The *calling line identification* (caller ID) feature lets you see who is calling before you answer.


 

- If the caller's name is stored in your phonebook, the phone automatically displays the name. Otherwise, the phone displays the caller's phone number.
- If caller ID information is not available, your phone displays the message **Incoming Call**.

## ***Returning an Unanswered Call***

Your phone keeps a record of your unanswered calls. When you cannot answer a call, your phone displays:

- the  (missed call) indicator
- the message **X Missed Calls Y Unknown**, where **X** is the total number of missed calls and **Y** is the number of missed calls for which caller ID information is not available.




<b>Press</b>	<b>To</b>
1 <b>VIEW</b> 	see the received calls list, with the most recent call at the top
2 	scroll through the list and select a call that you want to return
3 	send the call

## ***Dialing an Emergency Number When the Phone is Locked***

Your service provider may program one or more emergency phone numbers that you can call even if your phone is locked or restricted.

When you see **Enter Unlock Code** in the display:

<b>Press</b>	<b>To</b>
1 keypad keys	dial the emergency number (such as 911)
2 	call the emergency number

## ***Entering Numbers in the Notepad***

Your phone stores the most recent string of digits entered on the keypad in a temporary memory location called the *notepad*.

These digits can be the last phone number that you called, or a phone number that you simply entered but did not call. These digits remain in the notepad even when you turn off the phone.

You can use the notepad to store a phone number that you intend to call later (such as a phone number told to you by the other party during a call). To retrieve these digits, see “Using the Notepad” on page 72.

## ***Muting the Ring or Vibrate Alert***

You can mute your phone’s incoming call alert before answering the call.

While the phone is ringing or vibrating:

<b>Press</b>	<b>To</b>
either volume key	turn off the ring or vibration alert



---

To specify a ring or vibration type, see “Ring/Vibrate” on page 115.



## Terminating an Incoming Call

While the phone is ringing or vibrating:



Press	To
 or <b>IGNORE</b> (  )	cancel the incoming call

Depending on your phone settings and the type of subscription you have with your service provider, the call may be forwarded to another number, or the calling party may hear a busy signal.

## Dialing With Speed Dial

The *speed dial* feature lets you dial any phonebook entry with a minimal number of keypresses.

Whenever you store an entry in your phonebook, the entry is assigned a unique speed dial number. If you know the speed dial number for the phonebook entry you want to call, you can use the speed dial feature.


Press	To
<b>1</b> keypad keys	enter the one-, two-, or three-digit speed dial number for the entry you want to dial
<b>2</b> 	submit the number
<b>3</b> 	call the entry


# ***Sending and Receiving Calls***

To make an entry in the phonebook or view an existing entry's speed dial number, see "Storing a Phonebook Entry" on page 76.

## ***Dialing With One-Touch Dial***

You can call phonebook entries 2 through 9 with the push of a single key. Just press and hold the one-digit speed dial number for one second.

It is recommended that you reserve location 1 in the phonebook for storing your voicemail number. In many cases, your service provider has already stored your voicemail number in location 1. If your voicemail number is not accessible by pressing and holding the  key, complete the following steps:

Do This	To
<b>1</b> Store your voicemail number in phonebook location number 1 (see "Storing a Phonebook Entry" on page 76)	enable the  key voicemail shortcut
<b>2</b> Complete the instructions for "Storing Your Voicemail Number" on page 93	enable voicemail soft key and menu shortcuts

To store entries in locations 2 through 9 in the phonebook, see "Storing a Phonebook Entry" on page 76.



## Dialing a Number In a Text Message



If you receive a text message with an embedded phone number, you can dial the number directly.

**Note:** You must set up your inbox before opening text messages. See “Setting Up the Text Message Inbox” on page 95.

### Find the Feature



> Messages  
> Text Msgs




Press	To
1	scroll to the message with the number
2	open the <b>Text Msg Menu</b>
3	scroll to <b>Call Back</b>
4 <b>SELECT</b> ()	dial the number in the message

If the message contains more than one phone number, press to scroll to a number and then press **SELECT** () to dial.

## ***Additional Dialing Features***

In addition to pressing numbers on your keypad, you can insert numbers or characters and send calls in a variety of ways.


While dialing (with digits visible in the display):

<b>Do This</b>	<b>To</b>
Press  and then scroll to and select one of the following: <ul style="list-style-type: none"><li>• <b>Insert Pause</b> (to insert a <b>p</b>)</li><li>• <b>Insert Wait</b> (to insert a <b>w</b>)</li><li>• <b>Insert 'n'</b> (to insert an <b>n</b>)</li></ul>	insert a special character when making a calling card call: <ul style="list-style-type: none"><li>• <b>Pause</b> tells your phone to wait until the call connects before it sends the next digit.</li><li>• <b>Wait</b> tells your phone to wait until the call connects, and then to prompt you before it sends the next digit.</li><li>• <b>'n'</b> tells your phone to stop and to prompt you for a number before it sends the next digit.</li></ul>
Press  > <b>Attach Number</b>	attach a number from the phonebook or recent calls list to the end of the digits you entered
Press  > <b>Send Message</b>	create a text message addressed to the number entered





You can also call numbers using these features:

Do This	To Call
<p>Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).</p> 	<p>a phone number using the voice dial feature</p> <p>See "Recording a Voice Name For a Phonebook Entry" on page 78.</p>
<p>Press <b>MENU</b> &gt; <b>Recent Calls</b> &gt; <b>Received Calls</b> or <b>Dialed Calls</b> &gt; <i>entry to call</i></p>	<p>a missed call or a number from a call you recently dialed or received</p>

# Using Features While On a Call



---

## Using Call Waiting





If you subscribe to call waiting, an alert tone sounds while you are on a call to indicate that you have received a second call.

To put the first call on hold and answer the second call:

Press	To
1 	answer the new call
2 	switch back to the first call

To end the first call and answer the second call:

Press	To
1 	end the current call Your phone rings to signal the new call.
2 	answer the new call






## Making a Three-Way Call



During a call, you can call and connect a third party so that the three of you can talk together. You cannot do this if you already have a call on hold.

During a call:

Press	To
1 keypad keys	enter the third person's number
2 	call the number and connect the new person
3 	connect the two calls
4 	end the entire call

## Additional On-Call Features

While you are on a call, you can perform the following tasks:

Do This	To
Press <b>MUTE</b> (👁)	mute a call
Press (🔊)	activate and deactivate the integrated speakerphone during a call (hands-free mode)
Press <b>MENU</b> > <b>My Tel. Number</b>	see your phone number
Press <b>MENU</b> > <b>Send Tones</b>	send a number to the network as DTMF tones, for credit card calling or password entry  To activate DTMF tones, see the "DTMF" item on page 62.

# Using the Menu




## Navigating to a Feature

You can access many of your phone's features by using these keys to move through the menu system:

### Left Soft Key

Perform the function shown in the lower left corner of the display (usually **EXIT** or **BACK**).

### Menu Key

Enter the menu system, or open a sub-menu, when  appears in the bottom center of the display.

### End Key


Exit the menu system without making changes, return to the idle display.

### Right Soft Key

Perform the function shown in the lower right corner of the display (usually **SELECT** the highlighted menu item).

### 4-Way Navigation Key

Scroll up or down through menus and lists. Scroll left and right to cycle through and set the value of the highlighted menu item.

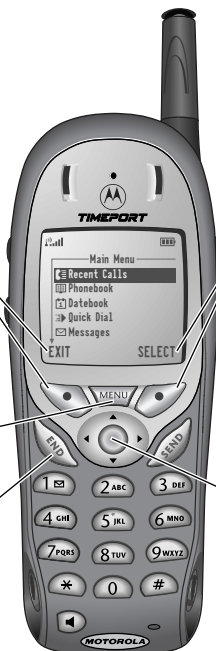


# Using the Menu

This guide shows you how to navigate to a specific menu feature as follows:


## Find the Feature

 > Recent Calls  
> Dialed Calls

The > symbol means that you should scroll to and select the feature. This example shows that you must press , scroll to and select **Recent Calls**, then scroll to and select **Dialed Calls** to see the dialed calls list.


## Selecting a Feature Option

Some features require you to select an item from a list:

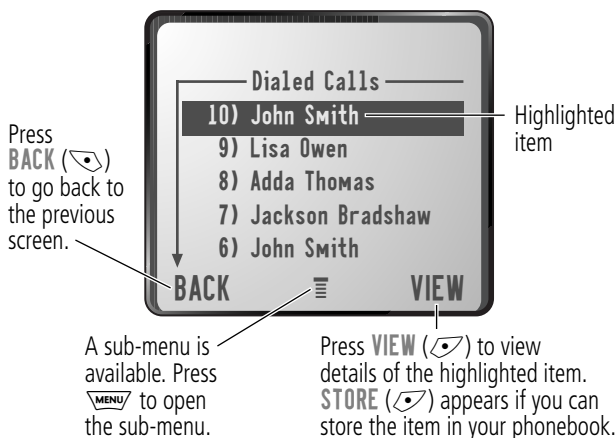



Select an item by highlighting it. Use one of the following approaches:

- Press  to scroll up or down to the item you want.
- In a numbered list, press a number key to highlight the item.
- In an alphabetized list, press a key multiple times to cycle through the letters on the key and highlight the closest matching list item.




## Entering Feature Information


Features such as the phonebook and datebook require you to enter information to fill in an entry's details:

Press  to scroll down to additional items.





Highlighted item

Press **CANCEL** () to exit without making changes. **DONE** () appears when you enter or edit information. Press **DONE** () to save your changes.

Press **CHANGE** () to edit the selected information.


## Using the Menu

- Enter numbers or text with the keypad. (See “Entering Text” on page 52.)
- When an item has a list of possible values, press  to the left or right to scroll through and select a value.
- When an item has a list of possible numeric values, press a number key to set the value.
- If you enter or edit information and then decide that you do not want to save your changes, press  to exit without saving.

The message center lets you compose and send text messages. (See “Entering Text” on page 52.) A *flashing cursor* shows you where the text will appear:

*Flashing cursor* indicates insertion point.



Press **CANCEL**  to exit without making changes.

Press  to open the sub-menu.

Press **BROWSE**  to view and insert a name, number, or message from previously stored information.





When you enter text, the flashing cursor changes to a *block cursor*, and the soft key functions change:

*Block cursor* indicates current highlighted character.



Press **OK** (👁) to accept and store the text.

After two seconds, the block cursor reverts to a flashing cursor and moves to the next position.

Press **DELETE** (👁) to delete the character to the left of the insertion point.

## Entering Text

### General Text Entry Rules

Use the keypad to enter letters, numbers, and other characters. Press the same key repeatedly to cycle through available characters (see "Character Chart" on page 53):

Press a number key to enter text at flashing cursor location.

Press a number key as many times as necessary to enter the desired character.


Press and hold a number key to cycle between uppercase and lowercase characters.

Press joystick **up** or **down** to move flashing cursor up or down one line in text message, or change character in block cursor to uppercase or lowercase.

Press joystick **left** or **right** to move flashing cursor to the left or right in text message.


 







 




- If you do not press a key for two seconds, the character in the block cursor is accepted, and the cursor moves to the next position.
- The first character of every sentence is capitalized unless you manually override it. (Hold the number key or press  down to force the character to lowercase while it is highlighted by the block cursor.)

## Character Chart


Use this chart as a guide for entering spaces, numbers, letters, and other characters. Press and hold a key to cycle between uppercase and lowercase characters.


	space . 1 ? ! , @ & : ; " - ( ) ' ÿ i % £ \$ ¥ ¤
	a b c 2 ä å à α β ç
	d e f 3 Δ é è Φ
	g h i 4 Γ
	j k l 5 Λ
	m n o 6 ñ ö ø ò Ω
	p q r s 7 Π β Σ
	t u v 8 Θ ü ù
	w x y z 9 Ξ Ψ
	+ - 0 x * / = > < # §

## Predictive Text Entry with iTAP Software

iTAP™ software provides a predictive text entry method that lets you enter the letters of a word using only one keypress per letter.

## Activating and Deactivating iTAP Software

You must activate iTAP software prior to entering letters. You can do this from any text entry screen by pressing  and selecting the **iTAP** menu option.


When you are finished using iTAP software, press  again from any text entry screen and select **TAP Method** to reset your phone to use the standard text entry method described on pages 52 and 53.

## Entering Words

To enter a word:


Do This	To
<b>1</b> Press a keypad key once	enter the first letter of the word  The letters associated with the key you pressed are shown at the bottom of the display.
<b>2</b> Press keypad keys (one per letter)	enter the rest of the word  Alternative words and letter combinations are shown at the bottom of the display based on the keys you press. These word choices are updated with each keypress.



Do This	To
<b>3</b> When you have entered all the letters of the word, press <b>⬅➡</b>	locate and highlight the word you want
<b>4</b> Press <b>SELECT</b> (  )	add the highlighted word to the text area at the top of the display  A space is automatically inserted after the word.


For example, to spell the word "act," press **(2ABC)** **(2ABC)** **(8TUV)**. The display shows:

*Flashing cursor indicates insertion point.*

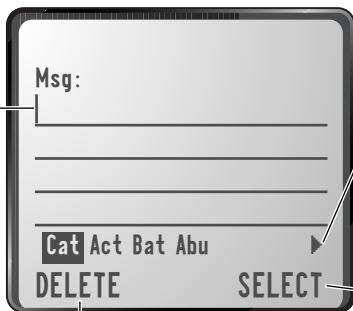




 
Press **⬅➡** to scroll and see additional word choices.

Press **SELECT** () to insert the highlighted word at the insertion point.

Press **DELETE** () to clear the last letter entered.


 
## Entering Novel Words

You may enter a word that is not in the iTAP software dictionary. If you enter all the letters of a word but the word is not displayed:

Do This	To
1 Press <b>DELETE</b> (  ) one or more times	delete one or more letters until you see a letter combination that matches the start of the word
2 Press 	highlight the letter or letter combination
3 Press <b>SELECT</b> (  ) , then press  to the left	shift the text entry cursor to the left and "lock" the selected portion of the word
4 Continue entering letters and highlighting letter combinations	spell the word

## Punctuation

The iTAP software automatically adds a space after each word. When you enter punctuation, this space is removed. To use punctuation:

Press	To
 or 	enter punctuation or other characters as shown in the "Character Chart" on page 53



## Capitalization

The first word of a sentence is automatically capitalized, with following words in lowercase. To set or adjust character capitalization:

Press	To
◀◊▶ up or down	change the words to initial character capitalized, all uppercase characters, or all lowercase characters




## Entering Numbers

To enter a number:

Do This	To
1 Enter the first digit and then highlight it	put the iTAP software in number entry mode
2 Press keypad keys	add digits to the number
3 Press <b>SELECT</b> (◊)	enter the number at the insertion point

## Deleting Letters and Words

Place the cursor to the right of the text that you want to delete, and then do the following:

Do This	To
Press <b>DELETE</b> (  )	delete one letter at a time
Press and hold <b>DELETE</b> (  )	delete the entire word
Continue to hold <b>DELETE</b> (  )	delete the entire message



# Menu Feature Descriptions



This chapter describes all of your phone's features in alphabetical order. Some descriptions also include page numbers where you can find more detailed information. If you would like to learn more about a specific feature, a reference guide for your phone is also available. To obtain a copy of the reference guide or another copy of this user guide, see the Motorola Web site at:

<http://motorola.com/consumer/manuals>

or contact the Motorola Customer Call Center at 1-800-331-6456.

## BROWSER



Access Web pages and run Web-based applications.

The micro-browser delivers WAP (Wireless Application Protocol) pages from your service provider directly to your phone. See "Micro-Browser" on page 113.



## CONNECTION

Connect your phone to a computer or hand-held device to send and receive data and fax calls on the connected device. Connect your phone using a serial cable or USB cable. See "Connecting Your Phone to an External Device" on page 123.

To connect your phone using Bluetooth™ wireless technology, see the user guide for your Bluetooth module and accessories.



# Menu Feature Descriptions

## ***Incoming Call***

 > Settings  
> Connection  
> Incoming Call

Specify the format for the next incoming call. You can select **Fax In Only**, **Data In Only**, or **Normal**.

## **DATEBOOK**


 > Datebook

Use the datebook calendar to schedule and review your appointments. See “Datebook” on page 84.

## **IN-CALL SETUP**

Use the in-call setup menu to set the features that are active during a call, such as the in-call timer and call answering options.

### ***Answer Options***

 > Settings  
> In-Call Setup  
> Answer Options

Turn call answering options on or off:

**Multi-Key**                      Answer by pressing any key

### ***In-Call Timer***

 > Settings  
> In-Call Setup  
> In-Call Timer

Adjust call timer display and beep settings. You can set your timer to beep at a selected interval during your calls. (60 seconds is the default.) You can also turn on or off a display timer during calls as follows:

**Time**                              Display the elapsed time for the current call

**Off**                                No in-call timer display



## MESSAGES



### > Messages



Adjust message settings, view and manage the various types of messages your phone can receive and/or send:

**Browser Alerts** Read alert messages received by your micro-browser

**Drafts** Store and edit text messages that you have written but not sent

**Outbox** View all outgoing text messages, delivered and undelivered

**Quick Notes** Select and send pre-written messages from the quick notes list

**Text Msgs** Send and receive text messages. See "Messages—Text" on page 95

**Vicemail** Listen to your recorded voice messages. See "Messages—Vicemail" on page 93

## OTHER SETTINGS

### **Car Settings**



### > Settings

### > Other Settings

### > Car Settings



Adjust hands-free car kit settings.

You can set your phone to route calls directly to the car kit when it detects a connection, and automatically answer calls after two rings. See "Hands-Free Use" on page 119.

# Menu Feature Descriptions

## Headset



- > Settings
- > Other Settings
- > Headset



Set your phone to automatically answer calls after two rings when connected to a headset. See "Hands-Free Use" on page 119.

## Initial Setup



- > Settings
- > Other Settings
- > Initial Setup

Set many basic phone options:

### Auto PIN Dial

Some networks require an authenticating PIN to allow outgoing calls. Use this feature to automatically dial your PIN.



### Auto Redial

Automatically redial calls that fail due to busy network conditions

### Backlight

Set the amount of time that the display backlight remains on, or turn off the backlight to conserve battery power

### Contrast Setting

Adjust the contrast setting for your display

### DTMF

Switch DTMF tones to be long, short, or off

### Language

Set the language for phone menus



## Master Clear

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer, *and* clear all user settings and entries

**Note:** This option *erases all user-entered information* stored in your phone's memory, including phonebook and datebook entries. Once you erase the information, it cannot be recovered.

## Master Reset

Reset all options back to their original factory settings *except* for the unlock code, security code, and lifetime timer

## Scroll

Force the cursor to stop or wrap around when it reaches the top or bottom of a list in the display

## Time and Date

Set the phone's time and date

## Zoom

Switch between six lines (**Zoom Out**) and four lines (**Zoom In**) of display text

## Network



> **Settings**  
> **Other Settings**  
> **Network**

View and adjust your phone's network settings.

Your service provider registers your phone to a network. You can view information about the current network, change how your phone searches for a network, and turn on/off alerts that indicate when a call is dropped or network registration changes.

# Menu Feature Descriptions

## **Personalize**

-  > Settings
- > Other Settings
- > Personalize

Set several personal phone options:

- Banner** Change the text that appears in the idle display
- Greeting** Change the text displayed when you turn on your phone
- Keys** Change the functions of the soft keys in the idle display (See "Customizing a Soft Key Function" on page 118.)
- Main Menu** Change the order of the main menu (See "Reordering Menu Items" on page 117.)
- Quick Dial** Change quick dial number(s)

## **PHONE STATUS**

### **Battery Meter**

-  > Settings
- > Phone Status
- > Battery Meter

View a detailed battery charge meter.

### **My Tel. Number**

-  > Settings
- > Phone Status
- > My Tel. Number

View, enter, and edit your name and phone number.



## Other Information



- > Settings
- > Phone Status
- > Other Information

View the phone's feature specifications (if available from the service provider).

## PHONEBOOK



- > Phonebook

Open the phonebook.

Store names and phone numbers as entries in your phonebook. Then, you can call phonebook entries by selecting them from the phonebook list. See "Phonebook" on page 75.

## QUICK DIAL



- > Quick Dial

Dial pre-programmed customer service numbers.

Your service provider may program one or more quick dial numbers, such as the customer service number, into your phone. You can call them by selecting them from the quick dial list.

**Note:** Your service provider may use a different name for this feature.



## RADIO



- > Radio

Listen to FM radio stations with the optional Motorola FM radio headset accessory. This menu feature is displayed only when the FM radio headset is plugged into the accessory connector port on your phone. See "Radio" on page 91.



# Menu Feature Descriptions

## RECENT CALLS

View the numbers of your recent dialed calls and received calls. See “Recent Calls” on page 69.

### **Call Times**

 > Recent Calls  
> Call Times

View call timers.

You can view five timers that track time spent on your last call, dialed calls, received calls, all calls since reset, and all calls total. See “Viewing and Resetting Call Times” on page 74.

### **Dialed Calls**

 > Recent Calls  
> Dialed Calls

View a list of recently dialed calls.

Your phone keeps a list of phone numbers from calls you recently dialed (even if the calls did not connect). See “Viewing the Received Calls or Dialed Calls List” on page 69.

### **Notepad**

 > Recent Calls  
> Notepad

Call or store the last number entered on the keypad.

You can use this notepad to view the last number you entered, even if you did not call the number. See “Using the Notepad” on page 72.

### **Received Calls**

 > Recent Calls  
> Received Calls

View a list of recently received calls.





Your phone keeps a list of the numbers from calls you recently received (even if you did not answer). See “Viewing the Received Calls or Dialed Calls List” on page 69.

## RING/VIBRATE

### **Alert**

 > Settings  
> Ring/Vibrate  
> Alert

Select a type of ring or vibration alert for incoming calls and messages. See “Ring/Vibrate” on page 115.

### **Alert Detail**

 > Settings  
> Ring/Vibrate  
> Alert Detail

Change details about the ring or vibration alert. *Alert* represents the name of the current alert setting. See “Ring/Vibrate” on page 115.

## SECURITY

### **Lock Application**

 > Settings > Security  
> Lock Application

Lock and unlock specific phone applications (such as phonebook and datebook) so that users must enter the unlock code to use them.

### **Lock Keypad**

 > Settings > Security  
> Lock Keypad

Lock and unlock your keypad. See “Locking and Unlocking Your Keypad” on page 134.

# Menu Feature Descriptions

## **New Passwords**

 > Settings > Security  
> New Passwords

Change your unlock code (originally set to 1234) or your security code (originally set to 000000). See “Assigning a New Code or Password” on page 130.

## **Phone Lock**

 > Settings > Security  
> Phone Lock

Lock and unlock your phone. See “Locking and Unlocking Your Phone” on page 132.

## **Restrict Calls**

 > Settings > Security  
> Restrict Calls

Restrict incoming and outgoing calls. See “Restricting Calls” on page 134.

## **SHORTCUTS**

 > Shortcuts

Create keypad or voice shortcuts to menu features.  
See “Shortcuts” on page 101.

## **VOICE NOTES**

 > Voice Notes

Use the voice key to record messages and phone calls. See “Voice Notes” on page 106.

# Recent Calls


---



You can use the recent calls menu to view received calls or dialed calls, retrieve the last number stored in the notepad, and view or reset call times.

## Viewing the Received Calls or Dialed Calls List

Your phone keeps lists of the numbers from calls you recently received and dialed, even if the calls did not connect. The lists are sorted from newest to oldest entries. The oldest entries are deleted as new ones are added. Each entry tells you the person's number (or name, if available) and whether the call connected or not. You can call, store, or delete the numbers on these lists.

 

**Shortcut:** Press  to go directly to the dialed calls list from the idle display.

To open the recent calls menu:









### Find the Feature



> Recent Calls



Press	To
1 	scroll to <b>Received Calls</b> or <b>Dialed Calls</b>
2 <b>SELECT</b> (  )	select <b>Received Calls</b> or <b>Dialed Calls</b>

# Recent Calls

Press	To
3 	scroll to an entry you want to call, store, or delete <b>Note:</b>  means the call connected.
4 	call the entry's number <b>Tip:</b> Press and hold  for two seconds to send the entry number as DTMF tones. To activate DTMF tones, see the "DTMF" item on page 62.
or	
	view the entry's details if <b>View</b> appears above the  key, or store the entry's details in the phonebook if <b>Store</b> appears above the  key
or	
	open the <b>Last Calls Menu</b> to perform other procedures as described in the following list




The **Last Calls Menu** includes the following options:

Option	Description
<b>Store</b>	Create a phonebook entry with the selected number in the <b>No.</b> field. (This option is not available if <b>STORE</b> appears above the  key, or if the number is already stored as a phonebook entry.)
<b>Delete</b>	Delete the entry. (This option is not available if <b>DELETE</b> appears above the  key.)
<b>Delete All</b>	Delete all entries in the current list.
<b>Send Message</b>	Create a new text message, with the selected number in the <b>Te1 No.</b> field. See "Sending a New Text Message" on page 99.
<b>Add Digits</b>	Add digits to the end of the selected number.
<b>Attach Number</b>	Attach another number from the phonebook or recent calls list to the end of the selected number.
<b>Send Tones</b>	Send the selected number to the network as DTMF tones, for credit card calling or password entry. (This option is available only during an active call.)  To activate DTMF tones, see the "DTMF" item on page 62.

## Using the Notepad

Your phone uses a notepad to store the most recent string of digits entered—either for a phone number that you called or for a number that you entered but did not call.

To call the number stored in the notepad, press  from the idle display.

To create a phonebook entry or perform other operations with the number:

### Find the Feature



> Recent Calls  
> Notepad

### Press

### To



open the **Dialing Menu** (to attach a number or insert a special character). See “Additional Dialing Features” on page 42.

or

**STORE** ()


create a new phonebook entry, with the notepad number copied into the **No.** field. See “Storing a Phonebook Entry” on page 76.

---



## Call Times

Your phone tracks and records call times. Use the recent calls menu to view and reset a call timer.

*Network connection time* is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

**The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, please contact your service provider directly.**

You can view the approximate network connection time elapsed during the following calls:

Timer	Description
Last Call	Time spent on the last call dialed or received. You cannot reset this timer.
Dialed Calls	Total time spent on dialed calls since the last time you reset this timer.
Received Calls	Total time spent on calls received since the last time you reset this timer.
All Calls	Total time spent on dialed and received calls since the last time you reset this timer.
Lifetime	Total time spent on all calls on this phone. You cannot reset this timer.





## Viewing and Resetting Call Times

To view a call timer:



### Find the Feature



> Recent Calls

Press	To
1 	scroll to <b>Call Times</b>
2 <b>SELECT</b> (  )	open the list of timers
3 	scroll to the timer you want
4 <b>SELECT</b> (  )	view the recorded time

To reset the call timer:

Press	To
1 <b>RESET</b> (  )	reset the time (if available)
2 <b>YES</b> (  )	confirm the reset




# Phonebook



You can store a list of names and phone numbers in your phone's electronic phonebook. Your phone can store as many as 400 entries. You can view these entries and call them directly from your phone.

To see the list of names stored in your phonebook, press **MENU** > **Phonebook** from the idle display. Scroll to a name and press **VIEW** (👁️) to view details of the phonebook entry as shown in the following display.

## Fields in a Phonebook Entry Form

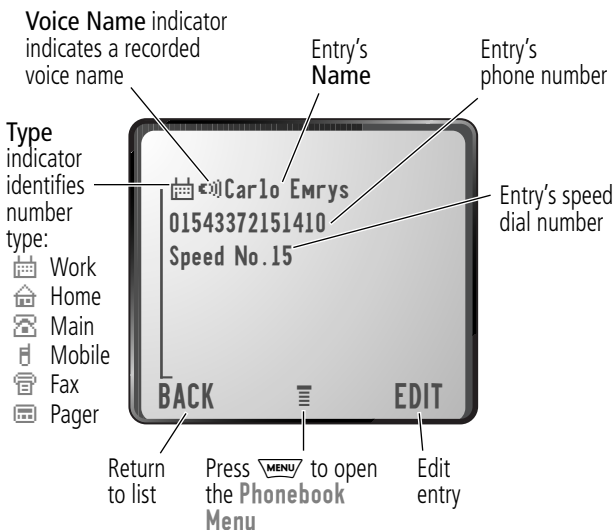

## Storing a Phonebook Entry

A phone number is required for a phonebook entry. All other information is optional.

**Shortcut:** Enter a phone number in the idle display, then press **STORE** (↵) to create a phonebook entry with the number in the **No.** field. Use the following procedure to enter additional information and store the entry.

## Enter Information

### Find the Feature



> Phonebook



> New

Press	To
1 <b>CHANGE</b> (↵)	select <b>Name</b>
2 keypad keys	enter a name for the phonebook entry (See "Entering Text" on page 52.)
3 <b>OK</b> (↵)	store the name
4 <b>CHANGE</b> (↵)	select <b>No.</b>
5 keypad keys	enter the phone number
6 <b>OK</b> (↵)	store the phone number
7 <b>CHANGE</b> (↵)	select <b>Type</b>
8 ◀◀▶▶	scroll to the type of phone number
9 <b>SELECT</b> (↵)	select the number type



Press	To
<b>10 RECORD</b> (👁) <b>or</b> Go to step 11 if you do not want to record a voice name for the entry	record a voice name for the entry, if desired  See "Recording a Voice Name For a Phonebook Entry" on page 78.
<b>11</b> ⏮⏭	scroll to <b>Speed No.</b> , the number to "speed dial" the entry  The next available speed dial number is assigned to a new phonebook number by default.
<b>12 CHANGE</b> (👁)	select <b>Speed No.</b> if you want to change it
<b>13</b> keypad keys	enter a different speed number, if desired
<b>14 OK</b> (👁)	save the modified speed number  If your chosen speed number is already assigned to another entry, you are asked if you want to replace that entry.
<b>15 SELECT</b> (👁)	select <b>MORE</b> if you want to create another entry with the same <b>Name</b>  <b>Note:</b> You must enter a name and number to use this option.

## Complete Phonebook Entry

When you are finished entering information for a phonebook entry:

Press	To
<b>DONE</b> (⏏)	store the entry and return to the phonebook list

## Recording a Voice Name For a Phonebook Entry

You can record a voice name when you create a new phonebook entry, or when you edit a previously stored phonebook entry. This lets you use voice dial to call the number without dialing (see “Voice Dial” on page 80).

Your phone can store a total of 20 voice names.

**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone’s microphone in a normal tone of voice.

### Find the Feature



> **Phonebook**

Do This	To
<b>1</b> Press ⏏	scroll to the entry that needs a voice name
<b>2</b> Press <b>VIEW</b> (👁)	display the entry’s detailed view



Do This	To
3 Press <b>EDIT</b> (⏏)	edit the phonebook entry
4 Press ⬅➡	scroll to <b>Voice Name</b>
5 Press <b>RECORD</b> (⏏)	begin the recording process The phone displays <b>Press Voice key then say name.</b>
6 Press and release the voice key on the right side of your phone and say the entry's name (in two seconds)	record the voice name The phone displays <b>Press Voice Key then REPEAT name.</b>



7 Press the voice key and repeat the name	confirm the voice name The phone displays <b>Trained: Voice Name.</b>
---	--

## Dialing a Phonebook Entry

You can use the phonebook list, voice dial, speed dial, or one-touch dial to call the numbers stored in your phonebook. To use speed dial, see “Dialing With Speed Dial” on page 39. To use one-touch dial, see “Dialing With One-Touch Dial” on page 40.



## Phonebook List

To call a number from the phonebook list:

### Find the Feature



> Phonebook

Press	To
1 	scroll to the entry you want to call
2 	send the call

## Voice Dial

To call a number using voice dial:

Do This	Result
Press and release the voice key on the right side of your phone and say the entry's name (in two seconds).	Your phone goes to the entry in the phonebook list, plays back the voice name stored with the phonebook entry, waits two seconds, then automatically dials the call.



## Editing a Phonebook Entry

### Find the Feature



> Phonebook

Press	To
1	scroll to the entry you want to edit
2 <b>VIEW</b> (	display the entry's detailed view
3 <b>EDIT</b> (	edit the phonebook entry

Edit a phonebook entry by following the procedures described in "Storing a Phonebook Entry" on page 76.

## Deleting a Phonebook Entry

To delete a phonebook entry:

### Find the Feature



> Phonebook

Press	To
1	scroll to the entry you want to delete
2	open the <b>Phonebook Menu</b>
3	scroll to <b>Delete</b>
4 <b>SELECT</b> (	select <b>Delete</b>
5 <b>YES</b> (	confirm the deletion

## Checking Phonebook Capacity

You can check your phonebook's capacity to see how many entries you have used and how many more are available. Your phonebook holds 400 entries.

To check the phonebook capacity for your phone:

### Find the Feature



> Phonebook

Press	To
1	open the <b>Phonebook Menu</b>
2	scroll to <b>Ph Book Capacity</b>
3 <b>SELECT</b> (	select <b>Ph Book Capacity</b>
	The phone displays the number of entries that are in use and the number that are empty.

## Synchronizing with TrueSync Software



You can synchronize phonebook entries between your phone and computer or hand-held device with TrueSync<sup>®</sup> software, a Motorola accessory product. See the TrueSync user guide for more information.



To connect your phone using Bluetooth<sup>™</sup> wireless technology, see the user guide for your Bluetooth Phone Module and accessories.





## Setting Up the Phonebook

You can set up your phone to sort your phonebook list by speed dial number (the standard), name, or voice dial.

**Tip:** The voice dial sort is identical to the name sort, except that the entries with voice name tags appear first.

### Find the Feature



> Phonebook

Press	To
1	open the <b>Phonebook Menu</b>
2	scroll to <b>Setup</b>
3 <b>SELECT</b> (	select <b>Setup</b>
4	scroll to <b>Sort by</b>
5 <b>CHANGE</b> (	select <b>Sort by</b>
6	scroll to the entry you want
7 <b>SELECT</b> (	select the entry you want

# Datebook

---

The datebook is a calendar that lets you schedule and organize events such as appointments and meetings. You can review your schedule of events for the week or by the day, and have the datebook play a reminder alarm for specific events. To schedule or see events:


## Find the Feature

 > **Datebook**

The datebook is organized by *views*—from the week view, to the day view, to a view of a specific event.

## Week View

When you open the datebook, your phone displays a calendar for the week. Lines or filled boxes under each day indicate that events have been scheduled.

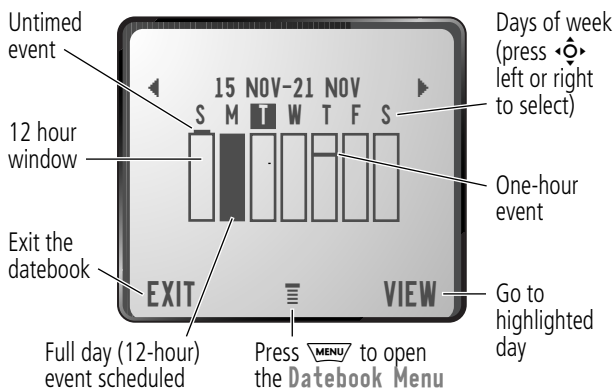




## Day View

Select a day in the week view and press **VIEW** (👁) to see the day's events. You can store, edit, view, copy, and delete any event from the day view.



## Event View

Select an event in the day view and press **VIEW** (👁) to open the detailed event view. You can edit, copy, and delete events from the event view.

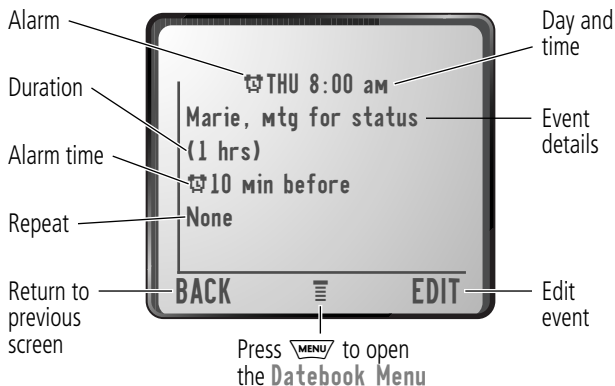







## Storing a New Event

A title is required for a datebook event. All other information is optional.

### Find the Feature

 > **Datebook** > *day*  
 > **New**

See “Selecting a Feature Option” on page 48 for instructions on scrolling to and selecting options.

Press	To
1 <b>CHANGE</b> (  )	select <b>Title</b>
2 keypad keys	enter a title for the event (see “Entering Text” on page 52.)
3 <b>OK</b> (  )	store the event title
4 	scroll to other fields and enter information as necessary  Other fields let you enter start time, duration, date, repeating events, and reminder alarm.
5 <b>DONE</b> (  )	store the new event and return to the day view

## Changing Event Information

To change information about an existing event:

### Find the Feature



> Datebook

Press	To
1	scroll to the scheduled event day
2 <b>VIEW</b> (	display the day view
3	scroll to the event you want to change
4 <b>VIEW</b> (	display the event view
5 <b>EDIT</b> (	edit the event
6	scroll to the detail you want to change
7 <b>CHANGE</b> (	edit the information
8 keypad keys	enter the new information
9 <b>DONE</b> (	store the information and return to the day view



## Copying an Event

To copy information from a current event to a new event:

### Find the Feature



> **Datebook**

Press	To
1	scroll to the scheduled event day
2 <b>VIEW</b> (	display the day view
3	scroll to the event to copy
4	open the <b>Datebook Menu</b>
5	scroll to <b>Copy</b>
6 <b>SELECT</b> (	copy the event
7 <b>YES</b> (	confirm the copy  Your phone assumes that you want to change the date, and displays the <b>Date</b> field.
8 keypad keys	enter the date information
9	move to the month, day, and year
<b>or</b>	
to the right	
10 <b>DONE</b> (	save the copy of the event
11 <b>DONE</b> (	return to the day view

## Deleting an Event

### Find the Feature



> Datebook

Press	To
1	scroll to the scheduled event day
2 <b>VIEW</b> (	display the day view
3	scroll to the event to delete
4	open the <b>Datebook Menu</b>
5	scroll to <b>Delete</b>
6 <b>SELECT</b> (	select <b>Delete</b>  For non-repeating events, go to step 7. For repeating events, the phone displays a delete event menu:  a  scroll to <b>This Event Only</b> or <b>Repeat Events</b>  b <b>SELECT</b> ( select the event(s) to delete
7 <b>YES</b> (	confirm the deletion  The phone briefly displays a <b>Deleted</b> : message and returns you to the day view.






# Radio



You can use your phone to tune, store presets, and listen to FM radio stations when the optional Motorola Original™ FM radio headset accessory is plugged into the phone's accessory connector port.



## Turning the Radio On and Off

Press	To
<b>Radio</b> (  )	turn the radio on and off
or	
 > <b>Radio</b>	

**Note:** The **Radio** () softkey option and **Radio** menu feature are displayed only when the FM radio headset is plugged into the accessory connector port.



## Tuning a Station

To tune a radio station with the radio on:

Do This	To
Press 	scroll up or down to the next frequency
or	
Press and hold 	scroll up or down to the next available stereo station

## ***Storing a Preset***

When you tune the station that you want to save:



Do This	To
Press and hold a number key (1  to 9  )	assign its preset number to the tuned station

---

---

## ***Selecting a Preset***

To select a preset radio station:

Press	To
a number key (1  to 9  )	tune the station stored at that preset location

---

---

## ***Sending and Receiving Calls With the Radio On***

Your phone interrupts the radio signal and rings or vibrates as usual to notify you of an incoming call, message, or other event. You can use the FM radio headset to converse with the other party during a call.

Turn the radio off before dialing outgoing calls. You do not have to turn off the radio to dial emergency numbers, or numbers selected from your phonebook or other lists.



# Messages—Voicemail



You can listen to your voicemail messages by calling your network voicemail phone number. Voicemail messages are stored on the network—not on your phone. Contact your service provider for more details.

## Storing Your Voicemail Number

Store your voicemail number in your phone to make it faster and easier to use voicemail. Your voicemail number is provided by your service provider.

### Find the Feature




> Messages



> VoiceMail Setup

Press	To
1 keypad keys	enter the phone number for your voicemail
2 OK (✓)	store the number

## Receiving a New Voicemail Message

When you receive a voicemail message, your phone displays **New VoiceMail** . (Some networks only indicate when you have messages, whether they are new or not.) If reminders are turned on, your phone sends a reminder every five minutes until you close the new message notification, listen to the message, or turn off your phone. (See “Reminders” on page 117.)

From the new message notification:

Do This	To
Press <b>CALL</b> (📞)	call your voicemail phone number and listen to the message

---

## ***Listening to a Voicemail Message***

To listen to your voicemail messages at any time:

### **Find the Feature**



> **Messages** > **VoiceMail**

Your phone calls the voicemail phone number you stored. If you do not have a voicemail number stored, the phone guides you through storing a number.



# Messages—Text



Text messages are brief messages that you can send and receive (such as **Where are we meeting?**). Received messages appear on your phone display or in your text message inbox.





You must set up the text message inbox *before* you can send and receive these messages. The total number of messages the inbox can hold depends on the length of the messages, and the number of other messages and drafts stored in your phone.

## Setting Up the Text Message Inbox

### Find the Feature

 > Messages

 > Text Msg Setup


Press	To
1 	scroll to <b>Srvce Center No.</b>
2 <b>CHANGE</b> ( 	change the <b>Srvce Center No.</b> which is provided by your service provider
3 keypad keys	enter the phone number for the service center that handles your outgoing messages
4 <b>OK</b> ( 	store your service center number
5 <b>CHANGE</b> ( 	change the <b>Expire After</b> period

# Messages—Text

Press	To
6 keypad keys	enter the expiration period—the number of days your network tries to send unreceived messages
7 <b>OK</b> (✓)	store the expiration period
8 <b>CHANGE</b> (✓)	change the <b>Cleanup</b> setting
9 ⬅➡	scroll to the period of time that messages stay in your inbox
10 <b>SELECT</b> (✓)	select the cleanup period If you select <b>Custom</b> , continue. Otherwise, the procedure is complete.
11 ⬅➡	change the entry for the number or label
12 ⬅➡ left and right	switch between the number and the label
13 <b>DONE</b> (✓)	store the custom cleanup period after you finish entering all information

## Receiving a New Text Message

**Note:** You must set up the text message inbox before you can receive text messages.

When you receive a new message, your phone displays **New Message**  and gives an alert. If reminders are turned on, your phone sends a reminder every five minutes until you close the



new message notification, read the message, or turn off your phone. (See “Reminders” on page 117.)

When your inbox is full, any new message replaces the oldest unlocked message.

From the new message notification:

Press	To
READ (👁)	open the message (or your text message inbox if there are multiple messages)

## ***Reading, Locking, or Deleting a Text Message***

You can open your text message inbox to read, lock, or delete messages at any time.

Messages in the text message inbox are sorted from newest to oldest. The oldest messages are deleted as new ones are added. If you want to save a message, you should lock it to prevent it from being overwritten as new messages are received.




### **Find the Feature**




> Messages > Text Msgs

Press	To
1 (👁)	scroll to the message you want (📧 = unread and urgent, ✓ = read, 🔒 = read and locked)
2 READ (👁)	open the message

# Messages – Text

Press	To
<b>3 SAVE</b> (  )	close the message without changes
<b>or</b>	
<b>DELETE</b> (  )	delete the message
<b>or</b>	
	open the <b>Text Msg Menu</b> to perform other procedures as described in the following list

The **Text Msg Menu** includes the following options:

Option	Description
<b>Call Back</b>	Call the number in the message header or the message text.
<b>Go To</b>	Go to a Web address (URL) in the message.
<b>Reply</b>	Open a new text message, with the message's <b>Reply To</b> number in the <b>To</b> field.
<b>Lock/Unlock</b>	Lock or unlock the message.
<b>Delete</b> <b>or</b> <b>Delete All</b>	Delete the message or all inbox messages. Press <b>Yes</b> (  ) to confirm the deletion.
<b>Store Number</b>	Open a new phonebook entry with the message's embedded number in the <b>No.</b> field.





Option	Description
New	Open a new text message form.
Setup	Open the inbox setup menu.

## ***Sending a New Text Message***

To create and send a new text message:

### **Find the Feature**






> Messages > Text Msgs



> New

Press	To
1 <b>CHANGE</b> (↵)	select <b>To</b>
2 keypad keys	enter the phone number where you want to send the message
3 <b>OK</b> (↵)	store the number
4 <b>CHANGE</b> (↵)	select <b>Msg</b>
5 keypad keys	enter the text message (see “Entering Text” on page 52.)
6 <b>OK</b> (↵)	store the text message
7 <b>CHANGE</b> (↵)	select <b>Call</b>
8 keypad keys	enter the number you want your recipient to call back (the message’s <b>From</b> field)
9 <b>OK</b> (↵)	store the number

Press	To
<b>10</b> <b>DONE</b> (  )	finish the message Your phone displays <b>Send Message Now?</b>
<b>11</b> <b>YES</b> (  ) or <b>NO</b> (  )	send the message  cancel the message or save it as a draft

## Viewing the Status of Sent Text Messages

Text messages that you send are stored in the outbox. To view the contents of your outbox:

### Find the Feature



> **Messages** > **Outbox**

Messages are sorted from newest to oldest.

The following icons indicate message status:

» Sending in progress

✓ Delivered

✗ Sending failed








# Shortcuts



Your phone includes several pre-programmed shortcuts. You can create additional shortcuts, if you like, to mark frequently used menu items.

## Standard Shortcuts

The following shortcuts are pre-programmed on your phone. You cannot edit or delete these shortcuts.

Do This	To
Press  , then press and hold  (within two seconds)	zoom in/out your phone's display view (See "Changing the Zoom Setting" on page 31.)
Press  	lock/unlock your keypad
Press  	display your phone number
Press 	go to the dialed calls list (See "Recent Calls" on page 69.)

## User-Settable Shortcuts




You can create shortcuts to many menu features and applications. A shortcut takes you directly to the menu item, or performs the menu action (if applicable).

## Creating a Shortcut





You can assign a keypad shortcut, or both a keypad shortcut *and* a voice shortcut to a menu item.

A voice shortcut lets you go directly to a menu item by saying its shortcut name. Your phone can store a total of five voice shortcuts.


**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.

Do This	To
1 Press 	enter the menu system
2 Scroll to the item to which you want to assign a shortcut	highlight the menu item
3 Press and hold 	open the shortcut editor The phone displays: <b>Assign Shortcut for:</b> “ <i>Item</i> ”? where <i>Item</i> is the name of the item you selected.
4 Press YES (  )	view shortcut options



Do This	To
<p>5 Press <b>CHANGE</b> ()</p> <p><b>or</b></p> <p>Press <b>DONE</b> ()</p> <p><b>or</b></p> <p>Press </p>	<p>change the keypad shortcut number, if necessary</p> <p>select the default keypad shortcut number and close the shortcut editor if you do not want to assign a voice shortcut</p> <p>scroll to <b>Voice</b> if you want to assign a voice shortcut</p>
<p>6 Press <b>RECORD</b> ()</p>	<p>begin the recording process</p> <p>The phone displays <b>Press Voice key then say voice shortcut.</b></p>

# Shortcuts

Do This	To
<b>7</b> Press and release the voice key on the right side of your phone and say the shortcut's name (in two seconds)	record the shortcut name The phone displays <b>Press Voice key then REPEAT voice shortcut.</b>
	
<b>8</b> Press and release the voice key and repeat the name	confirm the shortcut name The phone displays <b>Trained: Voice Shortcut</b>
<b>9</b> Press <b>DONE</b> (⏏)	close the shortcut editor


## Using Shortcuts

You can use a shortcut from the idle display, while on a call, or while scrolling through a menu.



## Use a Keypad Shortcut

If you know the shortcut number:

Press	To
1 	open the menu
2 the shortcut's number	go to the menu item, or perform the menu action

## Select a Shortcut From the List

To select a shortcut from the shortcut list:

**Find the Feature**




> **Shortcuts**

> *the shortcut you want*

## Use a Voice Shortcut

To use a voice shortcut:

Do This	To
1 Press 	open the menu
2 Press and release the voice key on the right side of your phone and say the shortcut's name (in two seconds)	go to the menu item, or perform the menu action

# ***Voice Notes***

---

The voice note feature lets you record personal messages. You can play back a voice note at any time. There are no pre-recorded voice notes on your phone.

## ***Recording a Voice Note***

Your phone can store a total of two minutes of voice note recordings. (That is, the combined recording time of all voice notes cannot exceed two minutes.)

Use this procedure to record a voice note when the idle display is visible.

**Tip:** Make your voice recording in a quiet location. Hold the phone about four inches (10 centimeters) from your mouth, and speak directly into the phone's microphone in a normal tone of voice.





## Do This

## Result

- 1 Press and hold the voice key on the right side of your phone for the duration of the recording.

A tone sounds in the earpiece and the phone displays the **Recording Voice Note** message.



- 2 Speak your voice message into the phone.

The phone records the message and displays a recording timer.

- 3 Release the voice key to stop recording.

The phone displays the voice notes list number and the total recording time.


## Viewing the Voice Notes List

The voice notes list shows all your voice notes along with other important information and features.

### Find the Feature



> Voice Notes

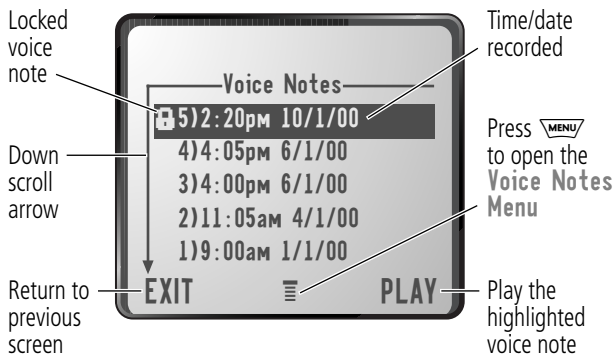

**New Voice Note** appears at the end of the list or by itself if no voice notes are stored. Select **New Voice Note** to view instructions on how to record a new voice note.

## Playing a Voice Note



To play a recorded voice note:

### Find the Feature



> Voice Notes




Press	To
1 	scroll to the voice note
2 <b>PLAY</b> 	play the voice note

When a Motorola Original™ headset accessory or FM radio headset accessory is attached to your phone, voice note playback is automatically routed to the headset.

**Tip:** You can play a voice note while taking a call. It won't be transmitted to the other party.

## Playback Screen

While the voice note is playing, the playback screen is displayed.

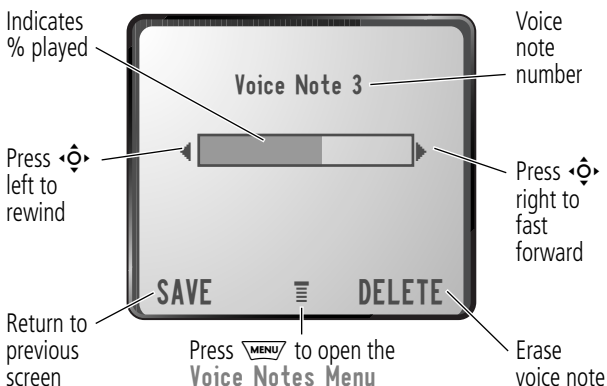

## Voice Note Controls

While playing back a voice note, press these keys to do the following:

Stop playback and go to **Voice Notes Menu**.

Stop playback and return to voice notes list.

Press **up/down** to stop playback and scroll to next voice note.

Press **left** to rewind three seconds, resume playing.  
Press **left and hold** to rewind to the beginning

Press any number key to alternately stop and start playback.

If the voice note is unlocked, stop playback and display **Delete Voice Note?**

If the voice note is locked, stop playback and unlock voice note.

Press **right** to fast forward three seconds, resume playing.  
Press **right and hold** to fast forward to end.

When playback is complete, press **right** to restart.





## Locking and Unlocking a Voice Note

You can prevent a voice note from being accidentally deleted by locking it. To delete a locked voice note, you must first unlock it.

### Find the Feature



> Voice Notes

Press	To
1	scroll to the voice note you want to lock or unlock
2	open the <b>Voice Notes Menu</b>
3	scroll to <b>Lock</b> or <b>Unlock</b>
4 <b>SELECT</b> (	lock or unlock the voice note

You can also lock or unlock a voice note while playing it back. When the playback screen is displayed:

Press	To
1	open the <b>Voice Notes Menu</b>
2	scroll to <b>Lock</b> or <b>Unlock</b>
3 <b>SELECT</b> (	lock or unlock the voice note

 

 


Playback stops when you lock or unlock a voice note. Press any number key to resume playback.

## Deleting a Voice Note


You can delete a single unlocked voice note or all unlocked voice notes. To delete a locked voice note, you must first unlock it. See “Locking and Unlocking a Voice Note” on page 111.

### Find the Feature

 > Voice Notes

Press	To
1 	scroll to the voice note you want to delete
2 	open the <b>Voice Notes Menu</b>
3 	scroll to <b>Delete</b> or <b>Delete All</b>
4 <b>SELECT</b> (  )	select the highlighted option The phone displays <b>Delete Voice Note X?</b> , or <b>Delete All Voice Notes?</b>
5 <b>YES</b> (  )	delete the selected voice note, or delete all voice notes

### Notes:

- You can always press **NO** () to cancel deletion.
- A deleted voice note cannot be recovered.



# Micro-Browser



The micro-browser lets you access Web pages and on your phone. Contact your service provider to set up access, if necessary.

## Starting a Micro-Browser Session

To open the micro-browser:

### Find the Feature



> **Browser**

The micro-browser displays the home page set up by your service provider.








Press	To
1	scroll to a bookmark or service
2 <b>SELECT</b> ()	select the service

**Shortcut:** If you open a text message with a Web address (URL) in it, you can go directly to the URL by selecting > **Go To**.

If you are unable to establish a network connection with the micro-browser, contact your service provider.

## Interacting With Web Pages

You can perform the following operations on a Web page:

Do This	To
Press 	scroll through a text message
Press  and then <b>SELECT</b> (  )	scroll through and select items in a list
Press keypad keys and then <b>OK</b> (  )	enter requested information
Press  to scroll to a phone number on a Web page, then press 	call the number from the micro-browser
Press 	go back to the previous Web page




# Adjusting Your Settings




You can adjust a wide variety of phone settings to suit your needs.


## Ring/Vibrate

Your phone rings or vibrates to notify you of an incoming call, message, or other event. This ring or vibration is called an *alert*. You can use a standard alert for all events, or set different alert types for different events. The alert setting indicator in your display shows the current standard alert setting:

 Loud ring

 Soft ring

 Vibrate

 Ring and vibrate

 

 Silent

## Select a Ring/Vibration for All Events

### Find the Feature



> Settings > Ring/Vibrate  
> Alert

Press	To
1 	scroll to the alert you want to use
2 SELECT (  )	select the alert  The phone displays the <b>Changed: Alert</b> message.

## Select a Ring/Vibration for a Specific Event





You can select the alert that your phone uses for a specific event (such as an incoming call) from 32 different preset tones and vibrations. When you select a ring or vibration alert for a *specific* event, it overrides the default alert set for *all* events.

**Tip:** This feature also lets you set the ringer volume and keypad volume.

### Find the Feature



> **Settings** > **Ring/Vibrate**  
> **Alert Detail**

Press	To
1 	scroll to the event for which you want to set a new alert
2 <b>CHANGE</b> (  )	select the event  The phone displays the list of available alerts.
3 	scroll to the alert you want for the event
4 <b>SELECT</b> (  )	select the alert  The phone displays the <b>Changed</b> : <i>Event Alert</i> message.



## Reminders

Reminders are alerts that ring or vibrate to notify you about a voicemail or text message that you have received, or a datebook event that you have scheduled.

To set or turn off reminders:

### Find the Feature



> **Settings** > **Ring/Vibrate**  
> **Alert Detail** > **Reminders**

Press	To
1	scroll to the reminder alert you want: <b>Beep</b> , <b>Vibrate</b> , or <b>Off</b>  <b>Beep</b> or <b>Vibrate</b> sets the corresponding reminder alert type. <b>Off</b> turns off all reminders.
2 <b>SELECT</b>	select the reminder alert

## Reordering Menu Items





You can customize the order of the items in your phone's main menu, depending upon your usage.

### Find the Feature





> **Settings**  
> **Other Settings**  
> **Personalize** > **Main Menu**

# Adjusting Your Settings





Press	To
1 	scroll to the menu item you want to move
2 <b>GRAB</b> (  )	grab the menu item you want to move
3 	move the item up or down the menu
4 <b>INSERT</b> (  )	insert the item in the new location

## Customizing a Soft Key Function

You can relabel the soft keys ( and ) to access different main menu items from the idle display.

### Find the Feature

 > **Settings**  
> **Other Settings**  
> **Personalize > Keys**

Press	To
1 	scroll to <b>Left</b> or <b>Right</b>
2 <b>CHANGE</b> (  )	open the key editor
3 	scroll to the new key function
4 <b>CHANGE</b> (  )	confirm the new function The key will have the new function whenever the phone is idle.



## Hands-Free Use



Your phone includes an integrated two-way speakerphone for all hands-free applications. You can also purchase an optional Motorola Original™ hands-free car kit or headset for your phone. These accessories provide alternative ways for you to use your phone without using your hands.

### Notes:

- When a hands-free car kit or headset accessory is connected to your phone, the integrated speakerphone is disabled.
- The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

## Automatic Answer

When you activate automatic answer and connect your phone to a car kit or headset, your phone automatically answers calls after two rings.

### Find the Feature



> **Settings**  
> **Other Settings**

Press	To
1	scroll to <b>Car Settings or Headset</b>
2 <b>SELECT</b> ()	select the feature
3	scroll to <b>Auto Answer</b>

# Adjusting Your Settings

Press	To
4 <b>CHANGE</b> (↵)	select <b>Auto Answer</b>
5 ◀⬆▶	scroll to <b>On</b> or <b>Off</b>
6 <b>SELECT</b> (↵)	confirm the setting

## Automatic Hands-Free

You can set up your phone to automatically route calls to a car kit when it detects a connection.

### Find the Feature



- > **Settings**
- > **Other Settings**
- > **Car Settings**
- > **Auto Handsfree**

Press	To
1 ◀⬆▶	scroll to <b>On</b> or <b>Off</b>
2 <b>SELECT</b> (↵)	confirm the setting



## Power-Off Delay

When your phone is connected to a car kit, you can set it to stay on for a specified time period after you switch off the ignition. This keeps your phone from draining your vehicle battery by staying on indefinitely, but leaves your phone on long enough that you do not have to re-enter your unlock code when you make short stops.

### Find the Feature



- > Settings
- > Other Settings
- > Car Settings
- > Power-Off Delay

Press	To
1	scroll to the time delay option you want
2 <b>SELECT</b>	confirm your selection

**Caution:** If you select **Continuous**, the phone does not power off when you turn off the ignition. Be careful not to accidentally drain your vehicle battery if you select this option.



## Charger Time

When your phone is connected to a car kit, you can set it to charge itself for a specified time period after you switch off the ignition. This helps ensure that the phone battery gets fully charged while the vehicle is parked.

### Find the Feature



- > Settings
- > Other Settings
- > Car Settings
- > Charger Time

Press	To
1 	scroll to the charge time option you want
2 <b>SELECT</b> (  )	confirm your selection





# **Data and Fax Calls**

---



A Motorola Original™ data kit or a Bluetooth™ wireless connection lets you transfer data between your phone and a computer or other external device. You can:

- synchronize data between your phone and an external device with TrueSync® software, a Motorola accessory product. See the TrueSync user guide for more information.
- use your phone as a wireless modem to connect to the Internet
- use your phone to send and receive data and fax calls on your computer or hand-held device.

More information about Motorola Original data kits is available at:

<http://www.motorola.com/dataaccessories>.

## **Connecting Your Phone to an External Device**

Connect your phone to an external device (such as a computer or hand-held device) using a Bluetooth wireless connection, a serial cable, or a USB cable.

To connect your phone using Bluetooth™ wireless technology, see the user guide for your Bluetooth Phone Module and accessories.

## Set Up a Cable Connection

Attach a serial cable or Motorola Original USB cable to the phone and external device as follows.


**Note:** Check your computer or hand-held device to determine the type of cable you need.

### Attaching a Serial Cable

Use the interchangeable head on the Motorola Multi-Connect Serial Cable to connect a computer, Palm III device, or Palm V device to your phone.

#### Do This


- 1 Plug the serial cable into the detachable head. Make sure that the Motorola logo on the detachable head and the metal shielding on the serial cable plug are both facing you.

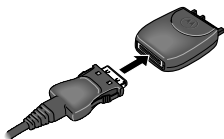



## Do This

- 2 With the Motorola logo and the phone both facing you, plug the detachable head into the phone's accessory connector port.

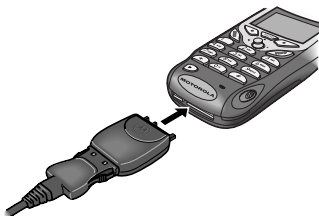

- 3 Plug the other end of the cable into the serial interface connection on the external device and tighten the screws.

## Attaching a USB Cable

### Do This

- 1 Plug the end of the cable with the Motorola logo into the phone's accessory connector port. Make sure that the logo and the phone are both facing you.



- 2 Plug the other end—the USB connection—into the USB port on the external device.

## ***Install the Software***

Install the software from the CD-ROM that comes with your Motorola Original data kit. See the data kit's user guide for more information.

## ***Sending a Data or Fax Call***

You can connect your phone to a computer or hand-held device to send data or a fax from the connected device.

Use this feature to transfer data from your computer onto another device, and to synchronize phonebook and datebook information between your phone, computer, and/or hand-held device.

Connect your phone (see "Connecting Your Phone to an External Device" on page 123) and do the following:

<b>Do This</b>	<b>To</b>
<b>1</b> Check the phone	make sure that the phone is connected and powered on
<b>2</b> Open the application on your computer	place the call through the application (such as dial-up-networking or fax) <b>Note:</b> You cannot dial data or fax numbers through your phone's keypad. You must dial them through your computer.
<b>3</b> End the transfer on your computer	close the call and connection when the transfer is complete



## Receiving a Data or Fax Call

You can connect your phone to a computer or hand-held device to receive data or a fax.

Use this feature to transfer data to your computer from another device.

## Set Up Your Phone

Before you receive a data or fax call, you must configure your phone for the incoming call type and connect the phone to the device that will receive the call.

### Find the Feature



> **Settings** > **Connection**  
> **Incoming Call**

Do This	To
1 Press <b>CHANGE</b> (◀▶)	select the <b>Next Call</b> menu option
2 Press (◀▶)	scroll to <b>Data In Only</b> or <b>Fax In Only</b>  Selecting either of these options mutes the earpiece and routes the next incoming call to the connected device.
3 Press <b>SELECT</b> (◀▶)	set the format for the next incoming call

Do This	To
4 Connect your phone to the device	enable the data or fax transfer (See "Connecting Your Phone to an External Device" on page 123.)

---

**Note:** You cannot answer incoming voice calls when your phone is in data or fax mode. Any voice calls you receive are treated as unanswered calls. You must reset your phone to voice mode to return these calls. See "Reset Normal Voice Operation" on page 129 and "Returning an Unanswered Call" on page 36.

## ***Transfer the Data or Fax***

Your phone notifies you when the data or fax call arrives, and transfers the call to the connected device. You must use the application running on the connected device to answer the call.

## ***End the Data/Fax Connection***

When the data or fax transfer is complete:

Do This	To
End the call from the connected device	close the connection

---






## Reset Normal Voice Operation

After you receive a data or fax call, you *must* reset your phone to resume normal voice operations. You cannot receive voice calls when your phone is in data or fax mode.

### Find the Feature



> **Settings** > **Connection**  
> **Incoming Call**

Do This	To
1 Press <b>CHANGE</b> (  )	select the <b>Next Call</b> menu option
2 Press 	scroll to <b>Normal</b>
3 Press <b>SELECT</b> (  )	reset your phone to make and receive regular voice calls

Your phone also reverts to normal voice operations when you turn it off and then turn it back on.

# Security


---

## Assigning a New Code or Password

Your phone's four-digit unlock code is originally set to 1234, and the six-digit security code is originally set to 000000 at the factory. Your service provider may reset these numbers before you receive your phone.

If your service provider has *not* reset these numbers, we recommend that you change them to prevent other users from accessing your personal information or modifying your phone settings. The unlock code must contain four digits, and the security code must contain six digits. Be sure to make a note of the new numbers.

### Notes:

- Your service provider may retain your phone's security code for customer service purposes. In this case, you will not be able to use phone features that require you to enter the security code (such as master clear, master reset, and the unlock code bypass feature).
- If the only password you can change is the unlock code, the **New Passwords** menu is unavailable and the **Unlock Code** option appears on the **Phone Lock** menu. In this case, open the unlock code editor by selecting:  > **Settings** > **Security** > **Phone Lock** > **Unlock Code**.





To change a code or password:

## Find the Feature





> Settings > Security  
> New Passwords

Press	To
1	scroll to the code or password you want to change
2 <b>CHANGE</b> (	select the code or password
3 keypad keys	enter your old code If you do not know your code, see “If You Forget a Code or Password” on page 131.
4 <b>OK</b> (	submit your old code
5 keypad keys	enter the new code
6 <b>OK</b> (	assign the new code
7 keypad keys	re-enter the new code
8 <b>OK</b> (	confirm the new code

## ***If You Forget a Code or Password***

If you forget your security code (originally set to 000000), contact your service provider.

If you forget your unlock code, try entering 1234 or the last four digits of your phone number. If that does not work, do the following when you see the **Enter Unlock Code** message:

Press	To
1 	go to the unlock code bypass screen
2 keypad keys	enter your security code
3 <b>OK</b> (  )	submit your security code

## Locking and Unlocking Your Phone

You can lock your phone manually or set your phone to lock automatically whenever you turn it off.

When you try to use a locked phone, it asks you to enter the unlock code. A locked phone still rings or vibrates for incoming calls or messages, *but you must unlock it to answer.*


You can make emergency calls on your phone even when it is locked. See “Dialing an Emergency Number When the Phone is Locked” on page 37.

## Lock Your Phone Manually

### Find the Feature



> **Settings** > **Security**  
> **Phone Lock** > **Lock Now**

Press	To
1 keypad keys	enter your four-digit unlock code
2 <b>OK</b> (  )	lock the phone



## Set Your Phone to Lock Automatically

You can set your phone to lock every time you turn it off:

### Find the Feature



> **Settings** > **Security**  
> **Phone Lock**  
> **Automatic Lock** > **On**

Press	To
1 keypad keys	enter your four-digit unlock code
2 <b>OK</b> (⏎)	set the phone to lock automatically



## Unlock Your Phone

At the **Enter Unlock Code** prompt:

Press	To
1 keypad keys	enter your four-digit unlock code  The unlock code is originally set to 1234. If necessary, see “If You Forget a Code or Password” on page 131.
2 <b>OK</b> (⏎)	unlock your phone

## Locking and Unlocking Your Keypad

You can lock your phone keypad to prevent accidental use. This feature is useful in situations where an accidental keypress might inadvertently dial an emergency number or one-touch dial number (for example, when carrying your phone in a purse or pocket).

Press	To
 	lock or unlock your keypad

**Note:** Incoming calls and messages unlock the keypad.

## Restricting Calls

You can stop all outgoing or incoming calls, or you can restrict them to the numbers stored in your phonebook.

An incoming call that is restricted is treated as an unanswered call. Your phone displays the **Missed Calls** message and adds the call to the received calls list.

### Notes:

- You can still place calls to emergency numbers when outgoing calls are restricted.
- Your phone still receives incoming text messages when incoming calls are restricted.



## Find the Feature

 > Settings > Security  
> Restrict Calls







Press	To
1 keypad keys	enter your four-digit unlock code
2 OK (✓)	open the restrict calls menu
3 ⬅➡	scroll to <b>Outgoing Calls</b> or <b>Incoming Calls</b>
4 CHANGE (✓)	select <b>Outgoing Calls</b> or <b>Incoming Calls</b>
5 CHANGE (✓)	change the <b>Allow</b> setting
6 ⬅➡	scroll to <b>All</b> , <b>None</b> , or <b>Phonebook</b>
7 SELECT (✓)	select the calls you want to allow

**Tip:** The phonebook application is not locked when you restrict calls to numbers stored in the phonebook. To prevent a user from adding (and then calling) a new phonebook entry, you may want to lock the phonebook application under these circumstances. See the “Lock Application” item on page 67.

# Troubleshooting

---

Check these questions first if you have problems with your phone:

Question	Answer
<b>Is your phone set up correctly?</b>	Press   . If you do not see your phone number, contact your service provider.
<b>Is your battery charged? Do you see  in the display?</b>	The battery level indicator should have at least one segment showing (  ). If it does not, recharge your battery. (See "Charging the Battery" on page 24 and "Battery Use" on page 33.)
<b>Does the handset have a signal? Do you see  in the display?</b>	Make sure that your antenna is fully extended. The signal strength indicator should have at least one segment showing (  ). If it does not, move to an area with a stronger signal to use your phone.
<b>Is the earpiece volume too low?</b>	While on a call, press the upper volume key on the side of your phone.


 


Question	Answer
<b>Is the other party unable to hear you?</b>	<p>Make sure that your antenna is fully extended and that your phone is not muted. Press <b>UNMUTE</b> (🔊) if necessary to unmute the phone.</p> <p>Also, make sure that your phone's microphone is not blocked by its carrying case or a sticker.</p>
<b>Has the phone been damaged, dropped, or gotten wet?</b>	<p>Dropping your phone, getting it wet, or using a non-Motorola battery or battery charger can damage the phone. The phone's limited warranty does not cover liquid damage or damage caused from using non-Motorola accessories.</p>
<b>Was a non-Motorola battery or battery charger used?</b>	

The following refer to specific problems:

Problem	Solution
<b>My phone was stolen. To whom should I report this?</b>	Report a stolen phone to the police and to your service provider (the company that sends you your monthly wireless service bill).
<b>I forgot my password.</b>	See "If You Forget a Code or Password" on page 131.





# Troubleshooting

Problem	Solution
<b>I pressed the power key, but nothing happened.</b>	Be sure to press and hold the power key until the display appears and you hear an audible alert (this could take a couple of seconds). If nothing happens, check that a charged battery is installed. (See "Installing the Battery" on page 22.)
<b>The display says: Enter Unlock Code. How do I unlock my phone?</b>	Enter the factory-preset unlock code (1234), or the last four digits of your phone number. (See "Locking and Unlocking Your Phone" on page 132.) If this fails, call your service provider (the company that sends you your monthly wireless service bill).
<b>My phone asks for an unlock code when I try to open a feature.</b>	The application you want is locked. If you own the phone but do not know the unlock code, see "If You Forget a Code or Password" on page 131.
<b>My phone does not ring.</b>	If you see  or  in the display, then the ringer is turned off. See "Ring/Vibrate" on page 115.
<b>I tried to place a call and heard an alternating high/low tone.</b>	Your call did not reach the wireless system. You may have dialed the number too soon after turning the phone on. Wait until the display says <b>Ready</b> before making a call.






Problem	Solution
<b>I cannot send/receive calls.</b>	<p>Make sure that your antenna is fully extended and that you have a phone signal (see the "Signal Strength Indicator" item on page 29). Avoid electrical or radio interference, and obstructions such as bridges, parking garages, or tall buildings.</p> <p>Your phone also may have the <b>Restrict Calls</b> feature turned on. If you know the unlock code, you can change this setting in the security menu (<b>MENU</b> &gt; <b>Settings</b> &gt; <b>Security</b>).</p>
<b>My phone has poor reception and drops calls.</b>	<p>Make sure that your antenna is fully extended and is not bent or damaged.</p> <p>Also, make sure you have a phone signal (see the "Signal Strength Indicator" item on page 29). Stay clear of any obstructions such as bridges, parking garages, or tall buildings.</p>
<b>I cannot hear others on my phone.</b>	<p>While on a call, press the upper volume key on the left side of your phone. Your phone display should show the volume increasing.</p> <p>Also, make sure that your phone's earpiece is not blocked by its carrying case.</p>



Problem	Solution
<b>I cannot open my inbox.</b>	Before you can use text or information services messages, you must set up the appropriate inbox. See "Setting Up the Text Message Inbox" on page 95.
<b>How do I see the calls I sent or received?</b>	<p>To see the most recent calls you dialed or received, open the "Recent Calls" lists:</p> <p> &gt; <b>Recent Calls</b>          &gt; <b>Received Calls</b>  <b>or</b>  <b>Dialed Calls</b></p>
<b>My phone will not send voicemail commands, passwords, or other codes.</b>	<p>Your phone sends commands and passwords as DTMF tones. You can set your phone's DTMF tones to be <b>Long</b>, <b>Short</b>, or <b>Off</b>. If you have trouble sending numbers, try changing your DTMF setting.</p> <ol style="list-style-type: none"> <li>From the idle display, press:   &gt; <b>Settings</b>          &gt; <b>Other Settings</b>          &gt; <b>Initial Setup</b>          &gt; <b>DTMF</b></li> <li>Press  to scroll to <b>Long</b> or <b>Short</b> (analog networks may not recognize short tones).</li> <li>Press <b>SELECT</b> () to select it.</li> </ol>



Problem	Solution
<b>My phone's display is too dark.</b>	<p>You can use the <b>Contrast Setting</b> feature (see page 62) to change the level of contrast in your phone display.</p> <p>You can also use the <b>Backlight</b> feature (see page 62) to change the length of time that your phone's backlight display stays on.</p>
<b>My battery didn't last as long as I expected. What can I do to extend battery life?</b>	<p>Your battery's performance is affected by charge time, feature use, temperature changes, and other factors. For tips on extending your battery life, see "Battery Use" on page 33.</p>
<b>I am unable to record a voice note, voice name, or voice shortcut</b>	<p>Try moving to a quieter location to make your voice recording. Hold the phone about four inches (10 centimeters) away from your mouth, and speak directly into your phone's microphone in a normal tone of voice.</p>

Problem	Solution
<b>I plugged the data cable into my phone but my phone did not beep. How do I know if the data cable is ready to go?</b>	<p>The beep indicates that you are set up correctly. If you did not hear a beep, make sure that both ends of the data cable are connected—the smaller end to your phone and the larger end to your computer.</p> <p>Finally, your computer may have deactivated the port to save power. Try opening an application that uses the port, like a fax or dial-up application, and your computer will automatically activate the port.</p>
<b>My phone beeped when I attached the data cable, but my fax and data applications don't work.</b>	<p>You must be in an area with digital coverage. Check your phone's display for the digital signal indicator ().</p> <p>Some wireless networks may not support data or fax transmission. If you see the digital indicator, but you are roaming on an unfamiliar network, this may be the case.</p> <p>Also, remember that data and fax transmission usually requires a subscription. Call your service provider for more information.</p>



Problem	Solution
<b>When sending data with the data cable, why does the computer show a connection rate of 19200 Kbps?</b>	19200 Kbps is the data transfer rate of the connection between your computer and the phone. The rate of the connection between your phone and the network is displayed on your phone, and will be either 14400 or 9600 Kbps.
<b>I can't end my data call by closing the application on my computer. What can I do?</b>	Try pressing  on your phone. Also try disconnecting the cable or turning off the phone. If possible, always close the connection through your computer. These alternative methods may disrupt the application on your computer.
<b>I launched the micro-browser but the display says: Service Not Available.</b>	You may be in an area without service. If you have wireless service, look in the display for the digital signal indicator (  ). If you do not see the indicator, you may be in an area that has only analog service or no service at all. If you see the digital signal indicator, you may be connected to a digital network that does not support Internet access.
<b>I launched the micro-browser but the display says: Data Server Unavailable.</b>	Try again in a few minutes. The servers may be temporarily busy.

# ***Programming Instructions***
















---

Follow this procedure if you need to program your phone's phone number or system ID.

**Note:** Programming is normally done by a trained technician at the site of purchase. Users should not make changes other than ones in the following procedure.

Before programming, ask your service provider for your:

- 10-digit MIN (Mobile Identification Number)
- 8- to 15-digit IMSI (International Mobile Service Identifier)
- 8- to 15-digit MDN (Mobile Directory Number)
- 5-digit AMPS SysID number
- 5-digit CDMA SysID number

Do This	To
<b>1</b> Press         (These keys spell P-H-O-N-E +    ).	open the user activation menu
<b>2</b> Press <b>SELECT</b> (  )	select <b>NAM1</b>
<b>3</b> Press the keypad keys for the 10-digit MIN	open the MIN display and enter the new MIN
<b>4</b> Press <b>OK</b> (  )	store the new MIN
<b>5</b> Similarly, enter appropriate numbers for the IMSI, MDN, AMPS SysID, and CDMA SysID	
<b>6</b> Press <b>DONE</b> (  )	close the NAM1 list
<b>7</b> Press <b>BACK</b> (  )	close the user activation menu

# ***Specific Absorption Rate Data***

---

## **This model phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions specified by the FCC with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output.



Before a phone model is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the limit established by the government-adopted requirement for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) as required by the FCC for each model. The highest SAR value for this model phone when tested for use at the ear is  $1.5 \text{ W/kg}^2$ , and when worn on the body, as described in this user guide, is  $0.91 \text{ W/kg}^2$ .

(Body-worn measurements differ among phone models, depending upon available accessories and FCC requirements). While there may be differences between the SAR levels of various phones and at various positions, they all meet the government requirement.

The FCC has granted an Equipment Authorization for this model phone with all reported SAR levels evaluated as in compliance with the FCC RF emission guidelines. SAR information on this model phone is on file with the FCC and can be found under the Display Grant section of:

<http://www.fcc.gov/oet/fccid>

after searching on FCC ID IHDT56AA1.

1. In the United States and Canada, the SAR limit for mobile phones used by the public is  $1.6 \text{ watts/kg (W/kg)}$  averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information reported to the FCC includes the FCC-accepted Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

***The U.S. Food and Drug  
Administration's Center for Devices  
and Radiological Health Consumer  
Update on Mobile Phones***

---



FDA has been receiving inquiries about the safety of mobile phones, including cellular phones and PCS phones. The following summarizes what is known—and what remains unknown—about whether these products can pose a hazard to health, and what can be done to minimize any potential risk. This information may be used to respond to questions.

**Why the concern?**

Mobile phones emit low levels of radio frequency energy (i.e., radio frequency radiation) in the microwave range while being used. They also emit very low levels of radio frequency energy (RF), considered non-significant, when in the stand-by mode. It is well known that high levels of RF can produce biological damage through heating effects (this is how your microwave oven is able to cook food). However, it is not known whether, to what extent, or through what mechanism, lower levels of RF might cause adverse health effects as well. Although some research has been done to address these questions, no clear picture of the biological effects of this type of radiation has emerged to date. Thus, the available science does not allow us to conclude that mobile phones are absolutely safe, or that they are unsafe. However, the available scientific evidence does not demonstrate any adverse health effects associated with the use of mobile phones.

## **What kinds of phones are in question?**

Questions have been raised about hand-held mobile phones, the kind that have a built-in antenna that is positioned close to the user's head during normal telephone conversation. These types of mobile phones are of concern because of the short distance between the phone's antenna—the primary source of the RF—and the person's head. The exposure to RF from mobile phones in which the antenna is located at greater distances from the user (on the outside of a car, for example) is drastically lower than that from hand-held phones, because a person's RF exposure decreases rapidly with distance from the source. The safety of so-called “cordless phones,” which have a base unit connected to the telephone wiring in a house and which operate at far lower power levels and frequencies, has not been questioned.

## **How much evidence is there that hand-held mobile phones might be harmful?**

Briefly, there is not enough evidence to know for sure, either way; however, research efforts are on-going. The existing scientific evidence is conflicting and many of the studies that have been done to date have suffered from flaws in their research methods. Animal experiments investigating the effects of RF exposures characteristic of mobile phones have yielded conflicting results. A few animal studies, however, have suggested that low levels of RF could accelerate the development of cancer in laboratory animals. In one study, mice genetically altered to be predisposed to developing one type of cancer developed more than twice as many such cancers when they were exposed to RF energy compared to controls. There is much uncertainty among scientists about whether results

obtained from animal studies apply to the use of mobile phones. First, it is uncertain how to apply the results obtained in rats and mice to humans. Second, many of the studies that showed increased tumor development used animals that had already been treated with cancer-causing chemicals, and other studies exposed the animals to the RF virtually continuously—up to 22 hours per day.

For the past five years in the United States, the mobile phone industry has supported research into the safety of mobile phones. This research has resulted in two findings in particular that merit additional study:

- 1 In a hospital-based, case-control study, researchers looked for an association between mobile phone use and either glioma (a type of brain cancer) or acoustic neuroma (a benign tumor of the nerve sheath). No statistically significant association was found between mobile phone use and acoustic neuroma. There was also no association between mobile phone use and gliomas when all types of types of gliomas were considered together. It should be noted that the average length of mobile phone exposure in this study was less than three years.

When 20 types of glioma were considered separately, however, an association was found between mobile phone use and one rare type of glioma, neuroepitheliomatous tumors. It is possible with multiple comparisons of the same sample that this association occurred by chance. Moreover, the risk did not increase with how often the mobile phone was used, or the length of the calls. In fact, the risk actually decreased with cumulative hours of mobile phone use. Most cancer causing agents increase risk with increased exposure. An ongoing study of brain cancers by the

National Cancer Institute is expected to bear on the accuracy and repeatability of these results.<sup>1</sup>

- 2 Researchers conducted a large battery of laboratory tests to assess the effects of exposure to mobile phone RF on genetic material. These included tests for several kinds of abnormalities, including mutations, chromosomal aberrations, DNA strand breaks, and structural changes in the genetic material of blood cells called lymphocytes. None of the tests showed any effect of the RF except for the micronucleus assay, which detects structural effects on the genetic material. The cells in this assay showed changes after exposure to simulated cell phone radiation, but only after 24 hours of exposure. It is possible that exposing the test cells to radiation for this long resulted in heating. Since this assay is known to be sensitive to heating, heat alone could have caused the abnormalities to occur. The data already in the literature on the response of the micronucleus assay to RF are conflicting. Thus, follow-up research is necessary.<sup>2</sup>

FDA is currently working with government, industry, and academic groups to ensure the proper follow-up to these industry-funded research findings. Collaboration with the Cellular Telecommunications Industry Association (CTIA) in particular is expected to lead to FDA providing research recommendations and scientific oversight of new CTIA-funded research based on such recommendations.

Two other studies of interest have been reported recently in the literature:

- 1 Two groups of 18 people were exposed to simulated mobile phone signals under laboratory conditions while they

performed cognitive function tests. There were no changes in the subjects' ability to recall words, numbers, or pictures, or in their spatial memory, but they were able to make choices more quickly in one visual test when they were exposed to simulated mobile phone signals. This was the only change noted among more than 20 variables compared.<sup>3</sup>

- 2 In a study of 209 brain tumor cases and 425 matched controls, there was no increased risk of brain tumors associated with mobile phone use. When tumors did exist in certain locations, however, they were more likely to be on the side of the head where the mobile phone was used.

Because this occurred in only a small number of cases, the increased likelihood was too small to be statistically significant.<sup>4</sup>

In summary, we do not have enough information at this point to assure the public that there are, or are not, any low incident health problems associated with use of mobile phones. FDA continues to work with all parties, including other federal agencies and industry, to assure that research is undertaken to provide the necessary answers to the outstanding questions about the safety of mobile phones.

## **What is known about cases of human cancer that have been reported in users of hand-held mobile phones?**

Some people who have used mobile phones have been diagnosed with brain cancer. But it is important to understand that this type of cancer also occurs among people who have not used mobile phones. In fact, brain cancer occurs in the U.S.

population at a rate of about 6 new cases per 100,000 people each year. At that rate, assuming 80 million users of mobile phones (a number increasing at a rate of about 1 million per month), about 4800 cases of brain cancer would be expected each year among those 80 million people, whether or not they used their phones. Thus it is not possible to tell whether any individual's cancer arose because of the phone, or whether it would have happened anyway. A key question is whether the risk of getting a particular form of cancer is greater among people who use mobile phones than among the rest of the population. One way to answer that question is to compare the usage of mobile phones among people with brain cancer with the use of mobile phones among appropriately matched people without brain cancer. This is called a case-control study. The current case-control study of brain cancers by the National Cancer Institute, as well as the follow-up research to be sponsored by industry, will begin to generate this type of information.

## **What is FDA's role concerning the safety of mobile phones?**

Under the law, FDA does not review the safety of radiation-emitting consumer products such as mobile phones before marketing, as it does with new drugs or medical devices. However, the agency has authority to take action if mobile phones are shown to emit radiation at a level that is hazardous to the user. In such a case, FDA could require the manufacturers of mobile phones to notify users of the health hazard and to repair, replace or recall the phones so that the hazard no longer exists.

Although the existing scientific data do not justify FDA regulatory actions at this time, FDA has urged the mobile phone industry to take a number of steps to assure public safety. The agency has recommended that the industry:

- support needed research into possible biological effects of RF of the type emitted by mobile phones
- design mobile phones in a way that minimizes any RF exposure to the user that is not necessary for device function
- cooperate in providing mobile phone users with the best possible information on what is known about possible effects of mobile phone use on human health

At the same time, FDA belongs to an interagency working group of the federal agencies that have responsibility for different aspects of mobile phone safety to ensure a coordinated effort at the federal level. These agencies are:

- National Institute for Occupational Safety and Health
- Environmental Protection Agency
- Federal Communications Commission
- Occupational Health and Safety Administration
- National Telecommunications and Information Administration

The National Institutes of Health also participates in this group.

### **In the absence of conclusive information about any possible risk, what can concerned individuals do?**

If there is a risk from these products—and at this point we do not know that there is—it is probably very small. But if people



are concerned about avoiding even potential risks, there are simple steps they can take to do so. For example, time is a key factor in how much exposure a person receives. Those persons who spend long periods of time on their hand-held mobile phones could consider holding lengthy conversations on conventional phones and reserving the hand-held models for shorter conversations or for situations when other types of phones are not available.

People who must conduct extended conversations in their cars every day could switch to a type of mobile phone that places more distance between their bodies and the source of the RF, since the exposure level drops off dramatically with distance. For example, they could switch to:

- a mobile phone in which the antenna is located outside the vehicle
- a hand-held phone with a built-in antenna connected to a different antenna mounted on the outside of the car or built into a separate package
- a headset with a remote antenna to a mobile phone carried at the waist

Again, the scientific data do not demonstrate that mobile phones are harmful. But if people are concerned about the radio frequency energy from these products, taking the simple precautions outlined above can reduce any possible risk.

## **Where can I find additional information?**

For additional information, see the following Web sites:

**Federal Communications Commission (FCC)** RF Safety Program (select "Information on Human Exposure to RF Fields from Cellular and PCS Radio Transmitters"):

<http://www.fcc.gov/oet/rfsafety>

**World Health Organization (WHO)** International Commission on Non-Ionizing Radiation Protection (select Qs & As):

<http://www.who.int/emf>

**United Kingdom, National Radiological Protection Board:** <http://www.nrpb.org.uk>

**Cellular Telecommunications Industry Association (CTIA):** <http://www.wow-com.com>

**U.S. Food and Drug Administration (FDA)** Center for Devices and Radiological Health: <http://www.fda.gov/cdrh/consumer/>

1. Muscat et al. Epidemiological Study of Cellular Telephone Use and Malignant Brain Tumors. In: State of the Science Symposium; 1999 June 20; Long Beach, California.
2. Tice et al. Tests of mobile phone signals for activity in genotoxicity and other laboratory assays. In: Annual Meeting of the Environmental Mutagen Society; March 29, 1999, Washington, D.C.; and personal communication, unpublished results.
3. Preece, AW, Iwi, G, Davies-Smith, A, Wesnes, K, Butler, S, Lim, E, and Varey, A. Effect of a 915-MHz simulated mobile phone signal on cognitive function in man. *Int. J. Radiat. Biol.*, April 8, 1999.
4. Hardell, L, Nasman, A, Pahlson, A, Hallquist, A and Mild, KH. Use of cellular telephones and the risk for brain tumors: a case-control study. *Int. J. Oncol.*, 15: 113-116, 1999.

FDA020400

# ***Warranty***

---

## **Limited Warranty for Motorola Personal Communications Products Purchased in the United States and Canada**

### **I. What This Warranty Covers**

- Products. Defects in materials and workmanship in wireless cellular telephones, pagers, and/or two-way radios, and certain accessories that are sold with them, such as the battery, battery charger and holster manufactured and/or sold by Motorola (Products).
- Batteries. Defects in materials and workmanship in batteries that are manufactured by Motorola and/or sold with Products are covered by this warranty only if the fully-charged capacity falls below 80% of rated capacity or they leak.
- Software. Physical defects in the media that tangibly embodies each copy of any software supplied with the Products.

## II. What the Period of Coverage Is

From the date the Products are purchased by the first end-user:

- Products. The warranty is for one year. Exception: The warranty for Spirit GT series and Talkabout series two-way radio accessories is for 90 days.
- Software. The warranty is for 90 days.
- Repairs/Replacements. The warranty is for the balance of the original warranty or for 90 days from the date you receive it, whichever is longer.

## III. Who is Covered

This warranty extends to the first end-user purchaser, only.

## IV. What We Will Do to Correct Warranty Problems

At no charge to you, we have the option to repair or replace the Products or software that do not conform to the warranty, or to refund the Products' purchase price. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products or parts. No software updates are provided.

## V. How to Get Warranty Service

Please call:

USA

**Cellular**

1-800-331-6456

**Paging**

1-800-548-9954

**Two-Way**

1-800-353-2729

**TTY (Text Telephone)**

1-888-390-6456

# Warranty

Canada

**All Products**

1-800-461-4575

**TTY (Text Telephone)**

1-888-390-6456

You will receive instructions on how to ship the Products to Motorola. You must ship the Products to us with freight, duties and insurance prepaid. Along with the Products you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider (if this Product requires subscription service); (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number. If requested, you must also return all detachable parts such as antennas, batteries and chargers. **RETAIN YOUR ORIGINAL PROOF OF PURCHASE.**

We will ship repaired or replacement Products at our expense for the freight and insurance, but at your expense for any duties. If additional information is needed, please contact us at the telephone number listed above.

## **VI. What This Warranty Does Not Cover**

- Products that are operated in combination with ancillary or peripheral equipment or software not furnished by Motorola for use with the Products ("ancillary equipment"), or any damage to the Products or ancillary equipment as a result of such use. Among other things, "ancillary equipment" includes batteries, chargers, adaptors, and power supplies not manufactured or supplied by Motorola. Any of these voids the warranty.

# Warranty

- Someone other than Motorola (or its authorized service centers) tests, adjusts, installs, maintains, alters, modifies or services the Products in any way. Any of these voids the warranty.
- Rechargeable batteries that: (a) are charged by other than the Motorola-approved battery charger specified for charging such batteries; (b) have any broken seals or show evidence of tampering; (c) are used in equipment other than the Product for which they are specified; or (d) are charged and stored at temperatures greater than 60 degrees centigrade. Any of these voids the warranty.
- Products that have: (a) serial numbers or date tags that have been removed, altered or obliterated; (b) board serial numbers that do not match each other, or board serial numbers that do not match the housing; or (c) nonconforming or non-Motorola housings or parts. Any of these voids the warranty.
- Defects or damage that result from: (a) use of the Products in a manner that is not normal or customary; (b) improper operation or misuse; (c) accident or neglect such as dropping the Products onto hard surfaces; (d) contact with water, rain, extreme humidity or heavy perspiration; (e) contact with sand, dirt or the like; or (f) contact with extreme heat, or spills of food or liquid.
- Physical damage to the surface of the Products, including scratches, cracks or other damage to a display screen, lens or other externally exposed parts.

- Failure of Products that is due primarily to any communication service or signal you may subscribe to or use with the Products.
- Coil cords that are stretched or that have any broken modular tabs.
- Products that are leased.

Flat-rate repair rates may apply to Products not covered by this warranty. To obtain information about Products needing repairs that are not covered by this warranty, please call the telephone number previously listed. We will provide information on repair availability, rates, methods of payment, where to send the Products, etc.

## VII. Some Other Limitations

**This is Motorola's complete warranty for the Products, and states your exclusive remedies. This warranty is given in lieu of all other express warranties. Implied warranties, including without limitation, the implied warranties of merchantability and fitness for a particular purpose, are given only if specifically required by applicable law. Otherwise, they are specifically excluded.**

**No warranty is made as to coverage, availability, or grade of service provided by the Products, whether through a service provider or otherwise.**

**No warranty is made that the software will meet your requirements or will work in combination with any hardware or applications software products provided**

**by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.**

**In no event shall Motorola be liable, whether in contract or tort (including negligence) for damages in excess of the purchase price of the Product, or for any indirect, incidental, special or consequential damages of any kind, or loss of revenue or profits, loss of business, loss of information or data, or other financial loss arising out of or in connection with the ability or inability to use the Products, to the full extent these damages may be disclaimed by law.**

## **VIII. Patent and Software Provisions**

At Motorola's expense, we will defend you, and pay costs and damages that may be finally awarded against you, to the extent that a lawsuit is based on a claim that the Products directly infringe a United States patent. Our obligation is conditioned on: (a) you notifying us promptly in writing when you receive notice of the claim; (b) you giving us sole control of the defense of the suit and all negotiations for its settlement or compromise; and (c) should the Products become, or in Motorola's opinion be likely to become, the subject of a claim of infringement of a United States patent, you permit us, at our option and expense, either to: procure for you the right to continue using the Products; replace or modify them so that they become non-infringing; or grant you a credit for such Products, as depreciated, and accept their return. The depreciation will be an equal amount per year over the lifetime of the Products, as established by Motorola.



Motorola will have no liability to you with respect to any claim of patent infringement that is based upon the combination of the Products or parts furnished under this limited warranty with ancillary equipment, as defined in VI., above.

**This is Motorola's entire liability with respect to infringement of patents by the Products.**

Laws in the United States and other countries preserve for Motorola and other third party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to reproduce in copies and distribute copies of such software. The software may be copied into, used in and redistributed with only those Products that are associated with such software. No other use, including without limitation, disassembly or reverse engineering of such software or exercise of exclusive rights in such software is permitted.

## **IX. State Law and Other Jurisdiction Rights**

Some states and other jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from jurisdiction to jurisdiction.

To obtain information on Motorola Personal Communications Products, including warranty service, accessories and optional Extended Warranties on selected Products, please call:

# Warranty

## USA

<b>Cellular</b>	1-800-331-6456
<b>Paging</b>	1-800-548-9954
<b>Two-Way</b>	1-800-353-2729
<b>TTY (Text Telephone)</b>	1-888-390-6456

## Canada

<b>All Products</b>	1-800-461-4575
<b>TTY (Text Telephone)</b>	1-888-390-6456

To correspond with Motorola about the Products, please write us at <http://www.motorola.com> or at:

In the USA:

Motorola, Inc.

600 North U.S. Highway 45

Libertyville, IL 60048

In Canada:

Motorola Canada Limited

5875 Whittle Road

Mississauga, ON L4Z 2H4

# ***Patent Information***

---

Manufactured under one or more of the following U.S. patents:

4291475	4616314	4797947	4890199	4977589	5036532
4302845	4617520	4798975	4896124	4977616	5038253
4312074	4628529	4802236	4896361	4979207	5040127
4365221	4629829	4803726	4897873	4984219	5042071
4369516	4633141	4809356	4903326	4984290	5045824
4369520	4636593	4811377	4903327	4989230	5053924
4369522	4636741	4811404	4904549	4992753	5055800
4374370	4648125	4817157	4904992	4996529	5055802
4378603	4649543	4827507	4905288	5008925	5055803
4390963	4654655	4829543	4905301	5010309	5057762
4398265	4680787	4831647	4912602	5010570	5058136
4400584	4704588	4843621	4916262	5014294	5059885
4400585	4711361	4845772	4918431	5014346	5060264
4434461	4715063	4851966	4918732	5017856	5063340
4455534	4717884	4852090	4922178	5018188	5065408
4486624	4730195	4860336	4941203	5020076	5067139
4491972	4731813	4860341	4942570	5020091	5070310
4523155	4736277	4868576	4945570	5020092	5077757
4546329	4737976	4870686	4956854	5020093	5077790
4574243	4741018	4872196	4959851	5023580	5081674
4581602	4742562	4873683	4963812	5023866	5083304
4581749	4761621	4876552	4964121	5023911	5087004
4585957	4764737	4876656	4970475	5025387	5093632
4593155	4775998	4876740	4972355	5027388	5095503
4594657	4791527	4879533	4972432	5028083	5107487
4602218	4794489	4885553	4972455	5028859	5109400
4605987	4797929	4887050	4975808	5029233	5111162

5113400	5153590	5205751	5257414	5323421	5402448
5113436	5157693	5210793	5259005	5325405	5404580
5117073	5160898	5211581	5260170	5325429	5404582
5117441	5162144	5212815	5260988	5327578	5406146
5117449	5163159	5212826	5261119	5327642	5406562
5117450	5164652	5214675	5262710	5331123	5408693
5121047	5166596	5214774	5263052	5333153	5410275
5121288	5166642	5216389	5263055	5336984	5410741
5121412	5168522	5220290	5265271	5338909	5414711
5122480	5170173	5220936	5267230	5343213	5420759
5122722	5170485	5222078	5276588	5349588	5424689
5124889	5170492	5222104	5276707	5351245	5428362
5127040	5175729	5222251	5276913	5359696	5428820
5127042	5175759	5230007	5276915	5361400	5428836
5127100	5175874	5230093	5278832	5363071	5430416
5128834	5182749	5233506	5278994	5365549	5432017
5133010	5185566	5233633	5280630	5366826	5434947
5134717	5185790	5235492	5280637	5367538	5436802
5140286	5187640	5237257	5280644	5367558	5438684
5140635	5187809	5237570	5285443	5371791	5442680
5142551	5192924	5239127	5287013	5373101	5444764
5142696	5193223	5241545	5287553	5375143	5446763
5144533	5195106	5241548	5287555	5375258	5446766
5146620	5195108	5241592	5287556	5379324	5448763
5148471	5198887	5241688	5289505	5381114	5448770
5148473	5200655	5242767	5297142	5384825	5448771
5150075	5201069	5243355	5299232	5392000	5453997
5150359	5203009	5247544	5301365	5392023	5457744
5150384	5203012	5247565	5308716	5392331	5459640
5151643	5203013	5249302	5321705	5396654	5459774
5152006	5203021	5251331	5321737	5401927	5461643
5152007	5204977	5255292	5321847	5402447	5463351

5463406	5504812	5554996	5606332	5659601	5706019
5463628	5506490	5555550	5606560	5660945	5706313
5463646	5508709	5557743	5606730	5661433	5708445
5463674	5509048	5559471	5613229	5664973	5710862
5463688	5510693	5559522	5613863	5666429	5710987
5463694	5511235	5559806	5615233	5668871	5711001
5465409	5513078	5561436	5615259	5670912	5715520
5465412	5513996	5561437	5615260	5673001	5715524
5469177	5519303	5561852	5621763	5673003	5717307
5471671	5519346	5565881	5621766	5673287	5722052
5475752	5519506	5566224	5625316	5674326	5724004
5477192	5519777	5568548	5625683	5675591	5726983
5485506	5524276	5570453	5628001	5675702	5729221
5485513	5526398	5572223	5628057	5678201	5732350
5486843	5528666	5572224	5628089	5678221	5737327
5487184	5530399	5574976	5629979	5678227	5737685
5488649	5530922	5577267	5630159	5680063	5738954
5490177	5533119	5577268	5630210	5684384	5739792
5491739	5535258	5583520	5630213	5691947	5740525
5493198	5535434	5584054	5630215	5692046	5742894
5493700	5539360	5586146	5631538	5692101	5745116
5493714	5542016	5588041	5633484	5696497	5745566
5495206	5542103	5589796	5633786	5696821	5745848
5495208	5542106	5590177	5634202	5699070	5747970
5497126	5542116	5594778	5640690	5699389	5748727
5497382	5544250	5594951	5642368	5699408	5754141
5497383	5546275	5598129	5646576	5701130	5754455
5499273	5546380	5598431	5649306	5701244	5754583
5499394	5551078	5600341	5649309	5701589	5754645
5499397	5551627	5604050	5656914	5703470	5754956
5502437	5553137	5604468	5656917	5703539	5758271
5504494	5553376	5604787	5657418	5703909	5760714

5761300	5809421	5850440	5889859	5936972	5999115
5761610	5809430	5854549	5892410	5939939	5999821
5764100	5809433	5854785	5893036	5940452	5999832
5764111	5809544	5854972	5894597	5940746	6002922
5764730	5812093	5856763	5896054	5943027	6002937
5764743	5812542	5856766	5896261	5945852	6005498
5766794	5812590	5857148	5898933	5945964	6006104
5771182	5814798	5857192	5900829	5946395	6008636
5771471	5815507	5859522	5901347	5949020	6009168
5777521	5815570	5859567	5901357	5950131	6009309
5777856	5815804	5859890	5903825	5950139	6009325
5784368	5815805	5861853	5903852	5953413	6009336
5784419	5815807	5862460	5905956	5954817	6009552
5784585	5815820	5862493	5907418	5955700	6011699
5787128	5821820	5864799	5907615	5955999	6011784
5787577	5822726	5865487	5909102	5956626	6011959
5793315	5826224	5867063	5910944	5963848	6011961
5793866	5831826	5867127	5912648	5963876	6012634
5796822	5832080	5867140	5920549	5964858	6014376
5797101	5832388	5867510	5920550	5966101	6014552
5798716	5835006	5870670	5923007	5966667	6016312
5799011	5835535	5872744	5924044	5966671	6016422
5799256	5835785	5877633	5925835	5969545	6018584
5801513	5838202	5878075	5925942	5974042	6018651
5801567	5841851	5878209	5926119	5977916	6018671
5802111	5842122	5878336	5926503	5980268	6021332
5805992	5844943	5878353	5926751	5982881	D284759
5807012	5846094	5880637	5930268	5983082	D285439
5808585	5848072	5880646	5930288	5987012	D288432
5808586	5848152	5881377	5930299	5988577	D288683
5809020	5848356	5889737	5933330	5995050	D289156
5809419	5848718	5889768	5936516	5996178	D292578

D292920	D315330	D339581	D348665	D358148	D374227
D295627	D315346	D339582	D348666	D359052	D374424
D295973	D315543	D340709	D348668	D359734	D374872
D295975	D315559	D340710	D348674	D359735	D375732
D296187	D315565	D340711	D348880	D359959	D375733
D297734	D315907	D340906	D349273	D360398	D375734
D297735	D316417	D341589	D349701	D360632	D375932
D297736	D316859	D342248	D350113	D361070	D375935
D299136	D320780	D342663	D350348	D361763	D375952
D299137	D322783	D342729	D350349	D362840	D376127
D299232	D324024	D342730	D350350	D362852	D377792
D300742	D324388	D342741	D351375	D365094	D377934
D300827	D325028	D343173	D351840	D365817	D378366
D301473	D325029	D343615	D352497	D366872	D378911
D301476	D325032	D343616	D352503	D367640	D379558
D301883	D325583	D343834	D352946	D368479	D379624
D302015	D325915	D343835	D353131	D368696	D379981
D303656	D327061	D343836	D353361	D369162	D379982
D304189	D327062	D344087	D353587	D369359	D380468
D305427	D328302	D344271	D353588	D369797	D380751
D305717	D332261	D344444	D353591	D370016	D381021
D306015	D332785	D344511	D354055	D370463	D381664
D306163	D334746	D344512	D354062	D370672	D382537
D306293	D337332	D344945	D355181	D372237	D382538
D306299	D338012	D345977	D355895	D372481	D382872
D306441	D338887	D346785	D356084	D372703	D383115
D306583	D339127	D346786	D356309	D372896	D383748
D306594	D339335	D346798	D357224	D372919	D383749
D307271	D339336	D348071	D357249	D373585	D383759
D309301	D339337	D348250	D357457	D373764	D384080
D309451	D339564	D348427	D357680	D374013	D384662
D314173	D339578	D348470	D357681	D374014	D384951

D384952	D388081	D393470	D400204	D407685	D412000
D385271	D388082	D394256	D400209	D407708	D412487
D385283	D388424	D394423	D400496	D408401	D412709
D385555	D388429	D394425	D400526	D408402	D413893
D385873	D388430	D394433	D400527	D408418	D413898
D385874	D388775	D394438	D400874	D408783	D414159
D385875	D388783	D394439	D401554	D408815	D415122
D385877	D388793	D395301	D401929	D409186	D415499
D385888	D389157	D395302	D403265	D410459	D416226
D386175	D389476	D395431	D404397	D410460	D417224
D386494	D389478	D395642	D405080	D410929	D417449
D386757	D389488	D395875	D405782	D411165	D419155
D387054	D389641	D396472	D405801	D411196	D419290
D387055	D390221	D397337	D406098	D411202	D419565
D387199	D390222	D397689	D406191	D411204	PAT022500
D387346	D390509	D397694	D406586	D411507	
D388078	D391567	D398926	D406695	D411535	
D388079	D391955	D400161	D406812	D411843	
D388080	D391966	D400165	D407063	D411844	

Other patents pending.



# ***Export Law Assurances***

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

# Index

---

## A

- accessories
  - optional 12, 91, 123
  - standard 21–22
- accessory connector port 5
- Add Digits** feature 71
- alert
  - defined 115
  - indicators 30, 115
  - muting 38
  - reminders 117
  - setting 115
  - type, selecting 116
- alert setting indicator
  - defined 30, 115
  - illustration 29
- antenna 5, 26
- application, locking 67
- appointments. *See* datebook
- Attach Number** feature 42, 71
- auto PIN dial 62
- automatic redial
  - activating 62
  - using 35–36

## B

- backlight 62
- banner text 64
- battery
  - car kit charger time 122
  - charging 24
  - extending battery life 33–34, 141
  - installing 22–23
  - level indicator 29, 30
  - meter 64
- block cursor, defined 51
- Bluetooth 82, 123
- browser alerts 61
- browser. *See* micro-browser 59

## C

- calendar. *See* datebook
- call
  - adding digits after phone number 71
  - alert type, selecting 116
  - alert, muting 38
  - alert, setting 115
  - answer options 60
  - answering 27

- call (continued)
    - attaching phone number to
      - prefix digits 42
    - call waiting 44
    - calling card 42
    - data call, setting 60
    - dialed calls list 43, 66
    - emergency number 37
    - ending 26
    - fax call, setting 60
    - in-call timer 60
    - incoming call type, setting 60
    - muting 46
    - placing 26
    - received calls list 43, 66
    - receiving 27
    - restricting 68, 134–135
    - sending 26
    - speakerphone, activating 33, 46
    - terminating 39
    - three-way call 45
    - timing 73
    - unanswered call 36–37
    - voice dial 43
  - call timers
    - described 73
    - resetting 74
    - viewing 66, 74
  - call waiting 44
  - caller ID 36
  - calling card call 42
  - calling line identification. *See* caller ID
  - car kit
    - automatic answer 119–120
    - automatic hands-free 120
    - charger time 122
    - power-off delay 121
  - clock
    - defined 30
    - illustration 29
  - codes. *See* passwords
  - computer
    - connecting to phone 123–126
    - synchronizing data 82, 123
  - contrast 62
  - cursor 50–51
  - customer service, calling 65
  - customizing the menu 117
- D**
- data call
    - connecting to external device 59, 123–126
    - incoming call format, setting 60

- data call (continued)
  - receiving 127–129
  - sending 126
- date, setting 63
- datebook
  - adding an event 87
  - alarm 87
  - calendar 84
  - changing event information 88
  - copying an event 89
  - day view 85
  - deleting an event 90
  - event view 86
  - reminders 87, 117
  - week view 84
- Datebook Menu** 84, 85, 86
- default passwords 130
- dialed calls list 43, 66, 69–71
- digital/analog signal indicator
  - defined 30
  - illustration 29
- display
  - backlight 62
  - banner text 64
  - contrast 62
  - described 28–30
  - greeting 64
  - idle display 28
  - illustration 29

- display (continued)
  - language 62
  - zoom 31, 63
- drafts folder 61
- DTMF tones 46, 62, 70, 71, 140

## E

- earpiece
  - illustration 5
  - volume, adjusting 31
- emergency number 37
- end key
  - functions 5, 26
  - menu functions 47
- ending a call 26
- Enter Unlock Code** message
  - 132, 133
- event alert 116
- external device
  - connecting to phone 123–126
  - synchronizing data 82, 123

## F

- fax call
  - connecting to external device 59, 123–126
  - incoming call format, setting 60

- fax call (continued)
  - receiving 127–129
  - sending 126
- flashing cursor, defined 50
- FM radio headset 65, 91
- 4-way navigation key 5

## G

- greeting, display 64

## H

- hands-free mode
  - automatic answer 119–120
  - automatic call routing 120
  - charger time 122
  - defined 119
  - power-off delay 121
  - speakerphone, activating 33, 46
- headset
  - automatic answer 119–120
  - FM radio 65, 91
- headset jack 5
- holster 21

## I

- idle display, defined 28
- in use indicator
  - defined 29
  - illustration 29

- inbox, text message 95

- in-call timer 60

- incoming call

  - terminating 39

  - type, setting 60

- Incoming Call** message 36

- indicators

  - alert setting 29, 30, 115

  - battery level 29, 30

  - digital/analog signal 29, 30

  - in use 29

  - menu 28, 29

  - message waiting 29, 30

  - missed call 36

  - ring alert 30, 115

  - roam 29

  - signal strength 29

  - silent alert 30, 115

  - vibrate alert 30, 115

  - voice message waiting 29, 30

  - voice name 75

- iTAP software

  - activating and deactivating 54

  - capitalization 57

  - deleting text 58

  - entering numbers 57

  - entering words 54–56

  - punctuation 56

## J

joystick 5

## K

key

- end 5, 26, 47

- 4-way navigation 5

- left soft key 5, 47, 118

- lock 134

- menu 5, 27, 47

- power 5, 25

- right soft key 5, 47, 118

- scroll 47

- send 5, 26, 27, 69

- speaker 46

- speakerphone 5, 33

- voice 5, 79, 106–107

- volume control 5

keypad volume 116

keypad, answering calls with  
60

## L

language 62

**Last Calls Menu**

- opening 70

- options 71

left soft key

- customizing 118

- functions 5, 47

lock

- applications 67

- keypad 134

- phone 132–133

- voice notes 111

lock application feature 67

loud ring alert 30, 115

## M

making a call 26

master clear 63

master reset 63

menu

- customizing 117–118

- Datebook Menu** 84, 85, 86

- entering text 52–58

- features 59–68

- language, setting 62

- Last Calls Menu** 70–71

- locking applications 67

- navigating 11, 47–48

- Phonebook Menu** 75

- rearranging features  
117–118

- scroll feature 63

- Text Msg Menu** 98–99

- using features 11, 48–51

- Voice Notes Menu** 108,  
109, 110

- menu indicator
  - defined 28, 30
  - illustration 29
- menu key 5, 27, 47
- message
  - deleting 97–98
  - dialing number from 41
  - drafts folder 61
  - inbox setup 95–96
  - locking 97–98
  - outbox 61, 100
  - quick note 61
  - reading 97–98
  - reminders 93, 96, 117
  - text 41, 61, 95–100
  - voicemail 61, 93–94
- message waiting indicator
  - defined 30
  - illustration 29
- micro-browser
  - browser alerts 61
  - call a number from 114
  - defined 59, 113
  - functions 114
  - go back to previous page 114
  - starting 113
- microphone 5
- missed call indicator 36
- Missed Calls** message 36

- muting a call 46
- my telephone number 46, 64

## N

- 'n' character 42
- network settings 63
- notepad
  - defined 38, 66
  - entering digits 38
  - retrieving digits 72

## O

- one-touch dialing 40
- optional accessory, defined 12
- optional feature, defined 12
- outbox 61, 100

## P

- passwords
  - changing 68, 130
  - default 130
  - if you forget a password 131–132
- patents 165–170
- pause character 42
- phone
  - accessories, optional 12
  - accessories, standard 21–22
  - alert, muting 38

- phone (continued)
  - answer options 60
  - connecting to external
    - device 59, 123–126
  - date, setting 63
  - feature specifications 65
  - keypad, locking and
    - unlocking 134
  - language, setting 62
  - locking 132–133
  - muting a call 46
  - network settings 63
  - one-touch dialing 40
  - passwords 68, 130,
    - 131–132
  - security code 131
  - specifications 65
  - speed dial, using 39–40
  - time, setting 63
  - turning on/off 25
  - unlock code 132
  - unlocking 25, 132–133
  - voice dial 43
- phone number
  - adding digits after 71
  - attaching to prefix digits 42
  - attaching two numbers 71
  - redialing 35
  - viewing your own 27, 46
  - voice dial 43
- phonebook
  - attaching phone number to
    - prefix digits 42
  - attaching two numbers 71
  - capacity, checking 82
  - deleting an entry 81
  - dialing an entry number 80
  - editing an entry 81
  - entry name 75
  - fields 75
  - number type indicator 75
  - one-touch dialing 40
  - phone number 75
  - sorting entries 83
  - speed dial number 39, 75,
    - 77
  - speed dial, using 39–40
  - storing an entry 76–78
  - synchronizing entries 82,
    - 123
  - voice name entry 78–79
  - voice name indicator 75
- Phonebook Menu** 75
- PIN code, dialing automatically 62
- power key 5, 25
- predictive text entry
  - activating and deactivating 54
  - capitalization 57



- predictive text entry
  - (continued)
  - deleting text 58
  - entering numbers 57
  - entering words 54–56
  - punctuation 56

## Q

- quick dial
  - setting number 64
  - using 65
- quick note 61

## R

- radio 65, 91–92
- received calls list 43, 66, 69–71
- receiving a call 27
- recent calls 69–71
  - adding digits after phone number 71
  - attaching phone number to prefix digits 42
  - attaching two numbers 71
- redial
  - automatic redial 35–36
  - busy number 35
- reminders
  - datebook 87
  - setting 117

- reminders (continued)
  - text message 96
  - voicemail message 93
- restricting calls 68, 134–135
- right soft key
  - customizing 118
  - functions 5, 47
- ring alert
  - indicators 30, 115
  - muting 38
  - setting 115
  - type, selecting 116
- ring and vibrate alert
  - indicator 30, 115
  - muting 38
- ringer
  - volume, adjusting 31, 116
- roam indicator
  - defined 29
  - illustration 29

## S

- scroll feature 63
- scroll key 47
- security code 131
- send key 5, 26, 27, 69
- sending a call 26
- short message service. *See* text message

- shortcuts
  - creating 102–104
  - standard 101
  - using 104–105
- signal strength indicator
  - defined 29
  - illustration 29
- silent alert indicator 30, 115
- SMS. *See* text message
- soft keys
  - customizing 64, 118
  - functions 47
  - illustration 5
- soft ring alert 30, 115
- speaker key 46
- speakerphone 5, 33, 46
- speakerphone key 5, 33
- speed dial
  - changing number 77
  - number, defined 39
  - sorting phonebook entries by 83
  - using 39–40
- standby time, increasing 34
- synchronizing data 82, 123

## T

- text
  - activating/deactivating iTAP software 54
  - block cursor 51
  - character chart 53
  - entering from keypad 52–58
  - flashing cursor 50
  - iTAP software predictive text entry 54–58
- text message 41, 61, 95–100
- Text Msg Menu**
  - opening 98
  - options 98–99
- three-way call 45
- time, setting 63
- timers
  - described 73
  - resetting 74
  - viewing 66, 74
- travel charger
  - charging phone battery 24
  - illustration 22
- TrueSync 82, 123

## U

- unlock
  - keypad 134
  - phone 132–133
- unlock code 132

## V

- vibrate alert
  - indicator 30, 115
  - muting 38
  - setting 115
  - type, selecting 116
- voice dial
  - dialing a number 43, 80
  - recording voice name 78–79
- voice key
  - dialing a number 43
  - functions 5
  - recording a voice name 79
  - recording a voice note 106–107
- voice message waiting
  - indicator 29, 30
- voice name
  - defined 78
  - phonebook indicator 75
  - recording 78–79

- voice note
  - defined 106
  - deleting 112
  - locking and unlocking 111
  - playback controls 110
  - playback screen 109
  - playing 108–110
  - recording 106–107
  - total recording time 106
  - viewing voice notes list 108
- Voice Notes Menu** 108, 109, 110

- voice shortcut
  - creating 102–104
  - defined 102
  - using 105
- voicemail 61, 93–94
- volume
  - earpiece 31
  - keypad 116
  - ringer 31, 116
- volume keys 5, 31

## W

- wait character 42
- warranty 157–164
- Web pages
  - functions 114
  - viewing 113

## **Z**

zoom setting 31, 63



**MOTOROLA**

## ***Wireless Phone Safety Tips***

*"Safety is your most important call!"*

**Your Motorola wireless telephone gives you the powerful ability to communicate by voice—almost anywhere, anytime, wherever wireless phone service is available and safe conditions allow. But an important responsibility accompanies the benefits of wireless phones, one that every user must uphold.**

**When driving a car, driving is your first responsibility. If you find it necessary to use your wireless phone while behind the wheel of a car, practice good common sense and remember the following tips:**

- 1 Get to know your Motorola wireless phone and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- 2 When available, use a hands-free device.** If possible, add an additional layer of convenience to your wireless phone with one of the many Motorola Original™ hands-free accessories available today.



- 3 **Position your wireless phone within easy reach.** Be able to access your wireless phone without removing your eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voice mail answer it for you.
- 4 **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- 5 **If you receive an incoming call at an inconvenient time do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- 6 **Dial sensibly and assess the traffic; if possible, place calls when you are not moving or before pulling into traffic.** Try to plan calls when your car will be stationary. If you need to make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- 7 **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations which have the potential to divert your attention away from the road.
- 8 **Use your wireless phone to call for help.** Dial 9-1-1 or other local emergency number in the case of fire, traffic accident or medical emergencies.\*



- 9 **Use your wireless phone to help others in emergencies.** If you see an auto accident, crime in progress or other serious emergency where lives are in danger, call 9-1-1 or other local emergency number, as you would want others to do for you.\*
- 10 **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

\* Wherever wireless phone service is available.

**Check the laws and regulations on the use of wireless telephones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.**

For more information,  
please call  
1-888-901-SAFE  
or visit the  
CTIA Web site at  
[www.wow-com.com](http://www.wow-com.com)<sup>TM</sup>





(inside back cover)



**MOTOROLA**

**TIMEPORT™**

DIGITAL WIRELESS TELEPHONE